

P/N 016-0171-629 Rev. D 02/18

*E30511* 

Copyright 2018

## Disclaimer

While every effort has been made to ensure the accuracy of this document, Raven Industries assumes no responsibility for omissions and errors. Nor is any liability assumed for damages resulting from the use of information contained herein.

Raven Industries shall not be responsible or liable for incidental or consequential damages or a loss of anticipated benefits or profits, work stoppage or loss, or impairment of data arising out of the use, or inability to use, this system or any of its components. Raven Industries shall not be held responsible for any modifications or repairs made outside our facilities, nor damages resulting from inadequate maintenance of this system.

As with all wireless and satellite signals, several factors may affect the availability and accuracy of wireless and satellite navigation and correction services (e.g. GPS, GNSS, SBAS, etc.). Therefore, Raven Industries cannot guarantee the accuracy, integrity, continuity, or availability of these services and cannot guarantee the ability to use Raven systems, or products used as components of systems, which rely upon the reception of these signals or availability of these services. Raven Industries accepts no responsibility for the use of any of these signals or services for other than the stated purpose.

Calibration Reference Sheet	v
Unit Definitions and Conversions	vii
Unit of Measure Definitions	vii
Unit of Measure Conversions	vii

Chapter 1	Important S	Safety Information	1
Instructions fo	r Wire Routing		2
Instructions for	r Hose Routing		3

Chapter 2	Introduction	7
Chapter Z	Introduction	ľ

Intellispray <sup>™</sup> Features	8
Operation Modes	8
Pressure Nozzle Control	8
Turn Compensation	8
Individual Nozzle Control	9
Wheel Tracks	9
Virtual Sections	9
Direct Injection	9
Wireless Diagnostic Control	9
Care and Use	. 10

Chapter 3	System Calibration	11
Initial Start U	Jp and Calibration Wizard	11
Calibrati	on Wizard	11
Functional Ir	nspection	
Nozzle C	Control Valve Function	
Turn Cor	mpensation Feature	14
Sidekick Pro	CD Injection Initial Setup and Calibration	
Injection	Wizard and Calibration	
Injection	Wizard	

#### Chapter 4 Intellispray<sup>™</sup> Nozzle Control and Sidekick Pro ICD Setup.... 19

Intellispray <sup>™</sup> Tools Menu Overview	19
Tools Menu Settings Definitions	
Equipment Settings Tab	
System Settings Tab - User Settings	
System Settings Tab - Tank Fill	
System Settings Tab - Alarm	
System Settings Tab - Presets	
System Settings Tab - Product Control	
System Settings Tab - Pressure	31

Controller Diagnostics Inf	ormation Tab	 
System Information Tab		 

Chapter 5	Operation	37
Operation C	hecklist	
Intellispray™	Home Screen Definitions	
Quick Ac	cess Softkeys	
Upper He	ome Screen	
Lower He	ome Screen	

#### Chapter 6 Tally Registers ...... 47

Using Tally Registers	47
Resetting a Register	
Tally Register Definitions	48
Task Tallies	48
Lifetime Tallies	
Device Stats	
Distance	
Flow Rate Display	
Area/Hour Display	
Flow Rate Display Area/Hour Display	48 48

Chapter 7	<b>Nozzle Control</b>	Valve Diagnostics	49
-----------	-----------------------	-------------------	----

Nozzle Control Valve Diagnostic	Definitions	 	
Section Diagnostics Prompt		 	
Individual Nozzle Diagnostics		 	50

Chapter 8	Troubleshooting	53
Intellispray™	Nozzle Control Valve Status	53
Nozzle Techn	nical Specifications	54
Cable Trouble	eshooting	54
Troublesh	nooting NCV Cable Connections	54
Troublesh	nooting 19-Pin Boom Cable Connections	55
Troublesh	nooting Terminator Connections	55
Troublesh	nooting Flow Meter Cables	
Diagnostic Tr	ouble Code (DTC) List	
General Trou	bleshooting	64

## Appendix A Avoiding Skips with Intellispray<sup>™</sup> Nozzle Control System... 69

Overview		69
Recom	mendations for Intellispray <sup>™</sup> Nozzle Control Operation	69

Causes of Skips using Intellispray™ Nozzle Control	71
Tip Selection and Application Speed Guide	73
Drift Control and Droplet Sizing	73
Application Speed Guide	74

Appendix B Calibration Values	79
Section Widths	79
Target Rate Calibration	79
Product Calibration Settings	80
Response Sensitivity	80
Deadband	80
Pressure Control Settings	80
Response Rate	80

#### Appendix C Maintenance Schedule and Replacement Parts ...... 81

Intellispray <sup>™</sup> Nozzle Control Valve Maintenance	81
Nozzle Control Valve Maintenance Procedure	84
Intellispray <sup>™</sup> Nozzle Control Valve Assembly Procedure	86
System Testing	87
Testing for Leaks	87
Flow Meter Maintenance	87
Recalibrating the Flow Meter	88

## 

Power and Product Controller II ECU Har	ness Maintenance	
Boom Harness Connector Maintenance		

## 

Intellispray™ Storage and Start-Up Checklist	95
Preseason Cleaning and Flushing	95
Start-Up Inspection	95
Functional Inspection	96
Overlap Control Adjustment	97
Winterizing and Storing the System	97

Appendix F Intellispray™	Flowchart	99
--------------------------	-----------	----

Intellispray <sup>™</sup> Flowchart		. 99
-------------------------------------	--	------

Appendix G	<b>Remote Diagnostics</b>	Application	107
Diagnostic	Application Best Practices		. 107

#### CALIBRATION REFERENCE SHEET

Record settings and calibration values used when programming the system in the fields below and keep this sheet for future reference.

#### GENERAL IMPLEMENT INFORMATION

UNITS	US (Acres)	SI (Hectares)	Nozzle Spacing	Boom Offset	
Speed Cal			Tip Size	Boom	

Section Widths (Boom Cal)				
1.	5.	9.	13.	
2.	6.	10.	14.	
3.	7.	11.	15.	
4.	8.	12.	16.	

#### TANK FILL SETTINGS

Tank Capacity	Low Tank Limit	
Fill Flowmeter Cal	Units	

#### PRODUCT CONTROL SETTINGS

Min. Pump PWM	Max. Pump PWM	
Standby Pump PWM	Pump PWM Frequency	
Minimum Nozzle PWM	Meter Cal	
Units	Response Sensitivity	
Deadband		

#### PRESSURE SETTINGS

Response Rate	Min. Pressure	
Max. Pressure	0-250 psi or 0-150 psi	

### UNIT DEFINITIONS AND CONVERSIONS

#### UNIT OF MEASURE DEFINITIONS

Abbreviation	Definition	Abbreviation	Definition
GPM	Gallons per Minute	dm	Decimeters
lit/min	Liters per Minute	m	Meter
dl/min	Deciliters per Minute	MPH	Miles per Hour
PSI	Pounds per Square Inch	km	Kilometers
kPa	Kilopascal	km/h	Kilometers per Hour
GPA	Gallons per Acre	US	Volume per Acre
lit/ha	Liters per Hectare	SI	Volume per Hectare
ml/ha	Milliliters per Hectare	TU	Volume per 1,000 Square Feet
GPK	Gallons per 1,000 Square Feet	[]	Metric Numbers
mm	Millimeters	lb/acre	Pounds per Acre
cm	Centimeters	kg/ha	Kilograms per Hectare

#### UNIT OF MEASURE CONVERSIONS

To convert the meter cal value into the selected unit of measure, divide the original number printed on the flow meter label by the desired conversion value.

Fluid Ounces Conversion Formula	Liters Conversion Formula	Pounds Conversion Formula		
Original Meter Cal	Original Meter Cal	Original Meter Cal		
128	3.785	Weight of One Gallon of		

Liquid	Area
• 1 U.S gallon = 128 fluid ounces	• 1 square meter = 10.764 square feet
• 1 U.S. gallon = 3.785 liters	• 1 hectare = 2.471 acres or 10,000 square meters
<ul> <li>1 U.S. gallon = 0.83267 imperial gallons</li> </ul>	• 1 acre = 0.405 hectares or 43,560 square feet
<ul> <li>1 U.S. gallon = 8.34 pounds (water)</li> </ul>	• 1 square mile = 640 acres or 258.9 hectares
<ul> <li>1 U.S. gallon = 10.67 pounds (28% N)</li> </ul>	

- 1 U.S. gallon = 11.06 pounds (32% N)
- 1 U.S. gallon = 11.65 pounds (10-34-0)

#### Length

- 1 millimeter (mm) = 0.039 inches
- 1 centimeter (cm) = 0.393 inches
- 1 meter (m) = 3.281 feet
- 1 kilometer (km) = 0.621 miles

- Pressure • 1 psi = 6.89 kPa
- 1 kPa = 0.145 psi

#### Length

- 1 inch = 25.4 mm or 2.54 cm
- 1 mile = 1.609 km

Pressure



## IMPORTANT SAFETY INFORMATION

## NOTICE

Read this manual and the operation and safety instructions included with the implement and/or controller carefully before installing the New Holland Intellispray<sup>™</sup> control system.

- Follow all safety information presented within this manual.
- If you require assistance with any portion of the installation or service of your New Holland equipment, contact a local New Holland dealer for support.
- Follow all safety labels affixed to the system components. Be sure to keep safety labels in good condition and replace any missing or damaged labels. To obtain replacements for missing or damaged safety labels, contact a local New Holland dealer.

When operating the machine after installing the New Holland Intellispray<sup>™</sup> control system:

- Be alert and aware of surroundings.
- Do not operate any agricultural equipment while under the influence of alcohol or an illegal substance.
- Determine and remain a safe working distance from other individuals. The operator is responsible for disabling product control when a safe working distance has diminished.
- Disable the system prior to starting any maintenance work on the machine or parts of the control system.

## **WARNING**

#### AGRICULTURAL CHEMICAL SAFETY

- Always follow safety labels and instructions provided by the chemical manufacturer or supplier.
- Always wear appropriate personal protective equipment as recommended by the chemical and/or equipment manufacturer.
- When storing unused agricultural chemicals:
  - Store agricultural chemicals in the original container and do not transfer chemicals to unmarked containers or containers used for food or drink.
  - Store chemicals in a secure, locked area away from human and livestock food.
  - Keep children away from chemical storage areas.
- Fill, flush, calibrate, and decontaminate chemical application systems in an area where runoff will not reach ponds, lakes, streams, livestock areas, gardens, or populated areas.
- Avoid inhaling chemical dust or spray particulate and avoid direct contact with any agricultural chemicals. Seek immediate medical attention if symptoms of illness occur during, or soon after, use of agricultural chemicals, products, or equipment.
- After handling or applying agricultural chemicals:

- Thoroughly wash hands and face after using agricultural chemicals and before eating, drinking, or using the rest room.
- Thoroughly flush or rinse equipment used to mix, transfer, or apply chemicals with water after use or before servicing any component of the application system.
- Follow all federal, state, and local regulations regarding the handling, use, and disposal of agricultural chemicals, products, and containers. Triple-rinse and puncture or crush empty containers before disposing of them properly. Contact a local environmental agency or recycling center for additional information.



#### ELECTRICAL SAFETY

- Always make sure that the power leads are connected to the correct polarity as marked. Reversing the lead wires could cause severe damage to electrical components and equipment.
- Connect the power cable last.
- Disconnect the Intellispray<sup>™</sup> nozzle control system from the vehicle battery before jump-starting the vehicle.
- Disconnect the Intellispray<sup>™</sup> nozzle control system from the vehicle battery before welding any component of the implement.

#### INSTRUCTIONS FOR WIRE ROUTING

The word "harness" is used to mean all electrical leads and cables, bundled and unbundled. When installing harness, secure it at least every 30 cm (12in) to the frame. Follow existing harness as much as possible and use these guidelines:

Harness should not contact or be attached to:

- · Lines and hoses with high vibration forces or pressure spikes
- Lines and hoses carrying hot fluids beyond harness component specifications

Avoid contact with any sharp edge or abrading surfaces such as, but not limited to:

- Sheared or flame cut edges
- Edges of machined surfaces
- Fastener threads or cap screw heads
- Ends of adjustable hose clamps
- · Wire exiting conduit without protection, either ends or side of conduit
- Hose and tube fittings

Routing should not allow harnesses to:

- Hang below the unit
- Have the potential to become damaged due to exposure to the exterior environment. (i.e. tree limbs, debris, attachments)
- Be placed in areas of or in contact with machine components which develop temperatures higher than the temperature rating of harness components
- Wiring should be protected or shielded if it needs to route near hot temperatures beyond harness component specifications

Harnessing should not have sharp bends

Allow sufficient clearance from machine component operational zones such as:

- Drive shafts, universal joints and hitches (i.e. 3-point hitch)
- Pulleys, gears, sprockets
- Deflection and backlash of belts and chains
- Adjustment zones of adjustable brackets
- Changes of position in steering and suspension systems
- Moving linkages, cylinders, articulation joints, attachments
- Ground engaging components

For harness sections that move during machine operation:

- Allow sufficient length for free movement without interference to prevent: pulling, pinching, catching or rubbing, especially in articulation and pivot points
- Clamp harnesses securely to force controlled movement to occur in the desired harness section
- Avoid sharp twisting or flexing of harnesses in short distances
- Connectors and splices should not be located in harness sections that move

Protect harnesses from:

- Foreign objects such as rocks that may fall or be thrown by the unit
- Buildup of dirt, mud, snow, ice, submersion in water and oil
- Tree limbs, brush and debris
- Damage where service personnel or operators might step or use as a grab bar
- Damage when passing through metal structures

**IMPORTANT**: Avoid directly spraying electrical components and connections with high pressure water. High pressure water sprays can penetrate seals and cause electrical components to corrode or otherwise become damaged. When performing maintenance:

- Inspect all electrical components and connections for damage or corrosion. Repair or replace components, connections, or cable as necessary.
- Ensure connections are clean, dry, and not damaged. Repair or replace components, connections, or cable as necessary.
- Clean components or connections using low pressure water, pressurized air, or an aerosol electrical component cleaning agent.
- Remove visible surface water from components, connections, or seals using pressurized air or an aerosol electrical component cleaning agent. allow components to dry completely before reconnecting cables.

#### **INSTRUCTIONS FOR HOSE ROUTING**

The word "hose" is used to mean all flexible fluid carrying components. Follow existing hoses as much as possible and use these guidelines:

Hoses should not contact or be attached to:

- Components with high vibration forces
- Components carrying hot fluids beyond component specifications

Avoid contact with any sharp edge or abrading surfaces such as, but not limited to:

#### CHAPTER 1

- Sheared or flame cut edges
- Edges of machined surfaces
- Fastener threads or cap screw heads
- Ends of adjustable hose clamps

Routing should not allow hoses to:

- Hang below the unit
- Have the potential to become damaged due to exposure to the exterior environment. (i.e. tree limbs, debris, attachments)
- Be placed in areas of or in contact with machine components which develop temperatures higher than the temperature rating of hose components
- Hoses should be protected or shielded if it needs to route near hot temperatures beyond hose component specifications

Hoses should not have sharp bends

Allow sufficient clearance from machine component operational zones such as:

- Drive shafts, universal joints and hitches (i.e. 3-point hitch)
- Pulleys, gears, sprockets
- Deflection and backlash of belts and chains
- Adjustment zones of adjustable brackets
- Changes of position in steering and suspension systems
- Moving linkages, cylinders, articulation joints, attachments
- Ground engaging components

For hose sections that move during machine operation:

- Allow sufficient length for free movement without interference to prevent: pulling, pinching, catching or rubbing, especially in articulation and pivot points
- Clamp hoses securely to force controlled movement to occur in the desired hose section
- Avoid sharp twisting or flexing of hoses in short distances

Protect hoses from:

- Foreign objects such as rocks that may fall or be thrown by the unit
- Buildup of dirt, mud, snow, ice, submersion in water and oil
- Tree limbs, brush and debris
- Damage where service personnel or operators might step or use as a grab bar
- Damage when passing through metal structures
- High pressure wash
- **IMPORTANT**: Avoid directly spraying electrical components and connections with high pressure water. High pressure water sprays can penetrate seals and cause electrical components to corrode or otherwise become damaged. When performing maintenance:
  - Inspect all electrical components and connections for damage or corrosion. Repair or replace components, connections, or cable as necessary.
  - Ensure connections are clean, dry, and not damaged. Repair or replace components, connections, or cable as necessary.

- Clean components or connections using low pressure water, pressurized air, or an aerosol electrical component cleaning agent.
- Remove visible surface water from components, connections, or seals using pressurized air or an aerosol electrical component cleaning agent. Allow components to dry completely before reconnecting cables.

## CHAPTER INTRODUCTION 2

The Intellispray<sup>™</sup> Nozzle Control System is designed to provide PWM product rate and nozzle control via an ISOBUS universal terminal (UT). Adding the Intellispray<sup>™</sup> control system to an existing ISOBUS product control system will allow a machine operator to monitor and control product application rate and pressure independently directly from the UT without additional displays, controllers, or consoles.

This document provides information regarding the following aspects of the Intellispray<sup>™</sup> nozzle control system:

- Initial Setup and Navigation
- Calibration
- Intellispray<sup>™</sup> System Operation
- Intellispray<sup>™</sup> Operation When Used With Direct Injection
- Updating Intellispray<sup>™</sup> Components
- NOTE: Prior to using the Intellispray<sup>™</sup> control features with any UT display, the Intellispray<sup>™</sup> Electronic Control Unit (Product Controller II ECU) must be calibrated for the control system. Refer to Chapter 3, System Calibration, for assistance with completing the initial calibration wizard.

This manual assumes that the required control hardware is already installed on supported equipment and is properly connected. Contact a local New Holland dealer for additional information on supported equipment configurations.

#### INTELLISPRAY<sup>™</sup> FEATURES

#### **OPERATION MODES**

The Intellispray<sup>™</sup> control system can be configured in several different modes to fit the application.

#### TABLE 1. Operation Mode Features

	Standard	VP	High Flow	High Flow VP	On/Off	Bypass
Direct Injection	Yes	Yes	Yes	Yes	Yes	Yes
Flow Control	Yes	Yes	Yes	Yes	Yes	Yes
Pressure Control	Yes	No	Yes	No	No	No
Turn Compensation	Yes	Yes	Yes	Yes	No	No
Individual Nozzle Control	Yes	No	No	No	Yes	No
Wheel Tracks	Yes	Yes	Yes	Yes	No	No
Virtual Sections	Yes	Yes	No	No	Yes	No
Wireless Diagnostics	Yes	Yes	Yes	Yes	Yes	Yes

- Standard The Intellispray<sup>™</sup> system will control to a target flow rate and target pressure. This is the most common sprayer setting.
- Variable Pressure (VP) This mode will control to a target-flow rate and target nozzle duty cycle by varying the pressure. This is useful for scenarios where pressure is not a priority (i.e. fertilizer application).
- High Flow This mode allows both a conventional nozzle and an Intellispray<sup>™</sup> nozzle to run simultaneously to achieve higher flow rates.
- High Flow VP This mode allows both a conventional nozzle and a NCV to run simultaneously to achieve higher flow rates. High Flow VP varies pressure and nozzle duty cycle to control the target flow rate.
- On/Off The Intellispray<sup>™</sup> System will hold the nozzle valve 100% open during application or fully closed when not applying. This mode can be used with air induction tips and stream bars.
- Bypass (Conventional) The Intellispray<sup>™</sup> system will control to a target flow, but the nozzle control valve is disabled. A secondary flow outlet must be made available at each tip.

#### PRESSURE NOZZLE CONTROL

The Intellispray<sup>™</sup> nozzle control system provides the same spray pattern and coverage as conventional spray systems. Pressure based nozzle control allows the operator to maintain the same target pressure and operate over a larger application speed or flow range while maintaining droplet size. This may help manage spray drift and allow the equipment to operate in higher winds. Better droplet control also provides more accurate field application and better rate control at lower target flow rates than the flowmeter can detect.

#### TURN COMPENSATION

Conventional application systems provide a uniform rate across the boom or implement width. This functionality works well in large field areas with straight swaths to ensure even coverage during application.

But what if the field you are working is not square? What if the field you are working has numerous waterways, tree lines, terraces, or other obstacles that require the equipment operator to follow the curvature of the feature during application? When applying around curves and corners, traditional application systems do not compensate for the speed variance observed at the inner and outer ends of the boom or implement. The difference in coverage across the large and ever expanding sizes of application equipment on the market today can result in large areas of under or over application and will reduce the application efficiency, and negatively impact yields.

Turn compensation, standard with the Intellispray<sup>™</sup> nozzle control system, helps ensure an even flow rate while applying around curves and corners, even when operating with the largest of application equipment sizes on the market. Turn compensation automatically reduces or stops the flow rate of nozzles toward the inside of the curve, while increasing the flow rate at the outside, to help ensure an even, efficient application to address crop conditions, minimize crop damage, and improve yields. Refer to the Tools Menu Settings Definitions section on page 20 for additional information on Turn Compensation.

#### INDIVIDUAL NOZZLE CONTROL

Do you desire more resolution, accuracy, and savings than standard boom sections or virtual sections can provide? On system with a Viper 4+, unlock individual nozzle control and turn your sprayer into a precision application machine. The Individual Nozzle control feature turns your existing nozzles into individual boom sections and provides the finest spraying resolution and improved accuracy in product application, which ultimately gives you maximum product savings. Contact a local New Holland dealer for more information.

#### WHEEL TRACKS

Wheel tracks allows the user to increase the flow rate of eight nozzles anywhere on the boom by up to 30% over the other nozzles to maintain optimal coverage in the turbulent air conditional behind vehicle wheels. If a valid profile is selected, this can be done by pressing on of the four wheel tracks buttons that have programmed nozzles. If not, the user may select which nozzles to offset the flow manually. With the push of a button, reset the nozzles back to their original flow rate or increase the flow on the other nozzles.

#### VIRTUAL SECTIONS

Whether one section or ten, the Intellispray<sup>™</sup> Virtual Section feature will automatically divide the boom sections into as many as 16 virtual sections. This feature is standard on all Intellispray<sup>™</sup> systems and increases boom section resolution. When combined with automatic section control on the task controller, this will increase spraying efficiency, enhance product mapping, and save time and input costs.

#### DIRECT INJECTION

The Raven Sidekick Pro ICD Direct Injection system is designed to provide efficient and accurate application of liquid chemicals applied from an injection module. By using a separate injection module or tank, the system eliminates mixing chemicals in the tank, reduces chemical waste, and simplifies equipment care and maintenance. Connect up to five injection systems to the Viper 4 and ISOBUS to control the whole system through the Intellispray<sup>™</sup> user interface screens on the Universal Terminal. Select a high flow injection system to control a wide range of chemical flow rates from 5 - 200 oz/min. Select a low flow injection system to provide chemical flow rates from 1 - 40 oz/min. Refer to the "Intellispray<sup>™</sup> Nozzle Control and Sidekick Pro ICD Setup" section on page 19 for additional information on Direct Injection configuration.

#### WIRELESS DIAGNOSTIC CONTROL

Wireless diagnostic control allows the user to control the system and perform diagnostics through a personal mobile device such as a table or smart phone. The user can turn on and off boom sections, turn the pump on or

off, and view real-time system information for troubleshooting or demonstration purposes without having to leave the cab. A Bluetooth low energy (BLE) compatible device is required.

#### CARE AND USE

Always follow equipment manufacturer's recommended maintenance procedures for storing equipment. Perform the following maintenance procedures before storing equipment with the Intellispray<sup>™</sup> nozzle control system:

- 1. Empty product from the chemical supply tank and flush the application system with water or an approved tank cleaner following the machine manufacturer's recommended procedures.
- 2. Remove hardened chemical residues or build up by flushing the system with soap and water.
- 3. Prime the system plumbing with a 50% water and automotive antifreeze mixture to prevent freezing of NCV components. Freezing will result in damage to the Intellispray<sup>™</sup> system and other plumbing components on the system.
- **NOTE:** Refer to Appendix C, Maintenance Schedule and Replacement Parts, for additional assistance with maintaining the Intellispray<sup>™</sup> nozzle control valves.

# CHAPTER SYSTEM CALIBRATION 3

#### INITIAL START UP AND CALIBRATION WIZARD

The calibration wizard must be completed the first time that the Intellispray<sup>™</sup> system is powered up on the ISOBUS network or if the default system settings are reset. The calibration wizard allows the operator to quickly configure the required Intellispray<sup>™</sup> system and nozzle control valves detected by the Intellispray<sup>™</sup> Product Controller II ECU.

Review the following sections for assistance with completing the calibration wizard for the Intellispray<sup>™</sup> nozzle control system.

**NOTE:** Refer to the UT Operation Manual for other necessary setup or calibration required before operating the Intellispray<sup>™</sup> nozzle control system or features.

#### TRANSFERRING UT'S

When multiple UT's are detected on the system, a Transfer UT softkey will appear. Use this button to transfer the PCII working set to an alternate UT at any point before, during, or after calibration.



If the PCII working set is not present on the desired display, check the other display and press the Transfer UT softkey to transfer the PCII working set.

If more than one UT is detected and the Transfer UT softkey is not pressed, the PCII working set will automatically load to the first UT to come online after the power cycle.

If the Transfer UT softkey is pressed, the PCII working set will automatically load to the last UT selected prior to a power cycle unless the system needs to be recalibrated or the UT was not detected by the PC II for over two minutes.

#### CALIBRATION WIZARD

To access the Intellispray<sup>™</sup> calibration wizard during the initial system start up:

- 1. Turn power on to the UT and allow the display to power up and initiate the ISOBUS system.
- **NOTE:** If properly connected and powered, the UT will automatically detect the Intellispray<sup>™</sup> Product Controller II ECU.

If the Product Controller II ECU is not detected by the display terminal, troubleshoot the Intellispray<sup>™</sup> Product Controller II ECU and restart the system. Refer to "Troubleshooting" on page 53 for assistance with connection issues. Contact a local Raven dealer for additional troubleshooting assistance if the Product Controller II ECU is still not detected.

2. Once the Intellispray<sup>™</sup> Product Controller II ECU is detected, the Intellispray<sup>™</sup> Menu button will display in the UT Menu.



Intellispray<sup>™</sup> PCII Menu

3. Touch the Menu button to access the Intellispray<sup>™</sup> nozzle control system user interface.

The first time that the Intellispray<sup>™</sup> system is started on the UT, or if the default settings have been reset, the first calibration wizard prompt will be displayed.

#### MACHINE MAKE AND BOOM SETUP

Select the correct machine make and the boom profile to automatically load machine specific settings.

#### NOZZLE SETUP, SPACING, AND TIP SIZE

The following steps are intended to assist with entering the nozzle calibration information required for the Intellispray<sup>™</sup> system.

- 1. Verify the total number of Nozzle Control Valves (NCV's) on the Intellispray<sup>™</sup> system matches the NCV's detected by the Intellispray<sup>™</sup> Product Controller II ECU.
- NOTE: If the total number of nozzles displayed does not match the expected number of nozzle control valves connected to the system refer to Chapter 8, Troubleshooting for assistance with the Intellispray™ nozzle control valve circuit.
- 2. The Intellispray<sup>™</sup> Product Controller II ECU will attempt to detect the number of nozzle control valves connected to the left boom (center of the boom to the tip of the left boom) circuit. Check the displayed value against the actual number of valves connected to the left boom circuit. If necessary, select the Nozzle Count field and enter the appropriate number of nozzle control valves connected to the left boom circuit.
- NOTE: To bypass nozzle configuration and operate the system without the Intellispray<sup>™</sup> Nozzle Control Valves, press the Skip Nozzle Setup button. If the Nozzle Control Valves are installed on the machine, the NCV's will remain closed and must be manually bypassed at the boom by opening a secondary flow outlet, or removed from the machine to apply product. The system will then operate as a conventional sprayer with the Intellispray<sup>™</sup> Product Controller II ECU.
- 3. Select the Next button to continue to the Tip Size prompt.
- 4. Select the Tip Size field and use the available options to select the orifice size of the tips currently installed on the nozzle bodies.
  - NCV is the tip connected to the Intellispray<sup>™</sup> valve. The Bypass Tip is for secondary tips at each nozzle.
  - If no tips are installed select NA as the tip size.

- If liquid fertilizer is being applied, select 28% or 32% as the tip size.
- 5. Select the Next button to proceed to the Nozzle Indexing prompt.

#### AUTOMATIC NOZZLE INDEXING

The automatic nozzle indexing process allows the Intellispray<sup>™</sup> system to automatically configure the location of each nozzle control valve on the left and right boom circuits and may detect issues with system connection or nozzle setup.

1. When prompted, select the Next button to begin the auto-indexing process.

Intellispray<sup>™</sup> will begin indexing nozzle control valves from the center of the implement boom and move out to the end of the left boom. The indexing process automatically repeats for the right boom circuit, starting from the center and working towards the end of the boom. If an error is detected on either the left or right boom circuits, the Intellispray<sup>™</sup> Product Controller II ECU will halt the indexing process and prompt the machine operator to correct the error before continuing with the calibration wizard. If an error occurs, troubleshoot the issue and press retry.

2.

#### **BOOM OFFSET**

- 1. Select the Boom Offset.
- 2. Enter the distance the boom is offset from the rear axle.
- 3. Press Next to continue to the Meter Cal prompt.

#### METER CAL AND UNITS

- 1. Select the Meter Cal field and enter the calibration value for the flow meter used to monitor the Intellispray<sup>™</sup> system product flow.
- 2. Select the units field and select the units used by the flow meter to monitor flow.
- **NOTE:** Raven flow meters use a meter cal in pulses per 10 gallons [37.9 L]. Other flow meters may use different meter cal rates.
- 3. Select the Next button to proceed to complete calibration.

#### FUNCTIONAL INSPECTION

Refer to the following sections for assistance with validating that the Intellispray<sup>™</sup> nozzle control system has been installed properly:

#### NOZZLE CONTROL VALVE FUNCTION

To verify that the Intellispray<sup>™</sup> nozzle control system is functioning properly after installation:

- 1. Flush the main product tank and boom plumbing with clean water, and verify the tank contains at least 100 gallons [379 L] of clean water.
- 2. Park the equipment in an area with enough space to unfold the booms and allows for visual inspection of the spray pattern from a moderate distance (e.g. 20 ft [6.1 m]).
- 3. Set the Intellispray<sup>™</sup> nozzle control system to manual mode, and set both the pump PWM and nozzle PWM to 50%. For Applicators, adjust the nozzle PWM valve up or down with the bump keys. The pressure gauge must be toggled to access the nozzle PWM. If necessary, open the tank valve.
- 4. If present, turn on the machine's switch then press the on-screen pump soft key to engage the pump.

5. Toggle all section switches and the master switch.



- 6. While maintaining a safe distance away from any spray drift, visually check that all nozzle control valves are pulsing with a uniform pattern. Adjacent nozzle control valves should alternate pulsing. If adjacent spray tips are pulsing at the same time, refer to Chapter 8, Troubleshooting, for additional assistance.
- 7. On the UT, set nozzle PWM to 0% and Pump PWM to about 30% to close the nozzle control valves and maintain a safe pressure in the boom.
- 8. Visually check that none of the nozzles are spraying or dripping. Refer to Testing for Leaks section on page 87 for additional assistance and troubleshooting if leaks are observed.

#### TURN COMPENSATION FEATURE

To verify the Turn Compensation feature is enabled and operating:

**NOTE:** Complete the procedure outlined in the Nozzle Control Valve Function section on page 13 to validate the nozzle control valve function prior to performing the following procedure.

Turn Compensation is automatically calibrated during the calibration wizard. If the feature is not operating as described below, refer to the "Turn Compensation Calibration" section on page 24 for assistance with calibrating the turn compensation feature if necessary.

- 1. Move the implement to an open area where the equipment may be driven in quick, tight turns.
- 2. Verify that the turn compensation feature is enabled.
- 3. Set the system to automatic mode and toggle the section and master switches to the on positions. Refer to Chapter 5, Operation for additional assistance with operation of the nozzle control system.
- 4. While driving at a speed between 5 and 10 mph [8 and 16 km/h] and maintaining a safe working distance, observe the inner-most and outer-most spray tips while the implement is turning sharply.
- **NOTE:** For fertilizer applicators, keep the toolbar raised so it is easier to observe the stream from each nozzle.
- **NOTE:** The nozzle PWM percent value may also be used to monitor the operation of nozzle control valves across the spray boom. Refer to Chapter 7, Nozzle Control Valve Diagnostics, for additional assistance with on-screen nozzle control valve diagnostics.

While turning, the nozzle control valves toward the outside of the corner should begin to output a higher flow rate (higher PWM percent), while valves toward the inside of the corner should begin to output a reduced flow rate (lower PWM percent) or may shut off. NCV diagnostics and performance can be seen in the Performance Indicator on the PCII home screen or in the individual NCV diagnostics pages. The difference between inner and outer flow rates will vary depending on machine speed, turn rate, and implement width. Turn compensation can also be observed on the Diagnostics Info page. Product Controller II ECU Yaw Rate will be zero while stationary. If turning clockwise, the Product Controller II ECU Yaw Rate will be positive, if turning counter clockwise, the Product Controller II ECU Yaw Rate will be negative.

5. If the operator is able to observe a difference in the spray pulsing, or the on-screen PWM percent, the turn compensation feature is working correctly. If there is no difference between the PWM percent values across the implement width, recalibrate the turn compensation feature and repeat the test.

#### SIDEKICK PRO ICD INJECTION INITIAL SETUP AND CALIBRATION

#### INJECTION WIZARD AND CALIBRATION

The injection wizard must be completed the first time that the Sidekick Pro ICD system is powered up on the ISOBUS network or if the default system settings are reset. The injection wizard allows the operator to quickly assign the detected devices on the ISOBUS to the correct product channel.

Review the following sections for assistance with completing the injection wizard for the Sidekick Pro ICD Direct Injection system.

**NOTE:** Refer to the UT operation manual for additional setup, operation, or calibration information before operating the Sidekick Pro ICD Direct Injection system or features.

#### **INJECTION WIZARD**

- 1. Turn the UT power on and allow the display to power up and initiate the ISOBUS system.
- **NOTE:** If properly connected and powered, the UT will automatically detect the Sidekick Pro ICD Product Controller II ECU. If the Product Controller II ECU is not detected by the display terminal, troubleshoot the Sidekick Product Controller II ECU and restart the system. Refer to "Troubleshooting" section on page 53 for assistance with connection issues. Contact a local Raven dealer for additional troubleshooting assistance if the Product Controller II ECU is still not detected.
- 2. Once the Sidekick Pro ICD Product Controller II ECU is detected, the Sidekick Pro ICD Menu button will display in the UT Menu.

#### FIGURE 1. Sidekick Pro ICD Menu Button



3. Press the Intellispray<sup>™</sup> Menu button.

#### FIGURE 2. Intellispray<sup>™</sup> Menu Button



4. Select the Tools Menu.

#### FIGURE 3. Tools Menu Softkey



5. Press the Equipment Settings tab.

FIGURE 4. Equipment Settings



- 6. Select the Injection Wizard.
- 7. Locate the Sidekick Pro ICD Product Controller II ECU serial number. The serial number is typically located on the front or top of the direct injection pump.
- 8. Assign the desired Sidekick Pro ICD Product Controller II ECU to the desired product channel.

FIGURE 5. Injection Wizard Serial Number Assignment



9. Press the Next softkey.

#### FIGURE 6. Next Screen



10. Set the desired Target Rate for each Sidekick Pro ICD Product Controller II ECU.

#### FIGURE 7. Product Controller II ECU Desired Target Rate

- Injection Wizard Target sata odukt Type | Fridukt Number | 111 1 2 15.0 earma 1 3 10.0 az/az 1 20.0 ..... 4 1 -5 32.0 +2/85 6 2 25.8 ezrae 1 • -BAVEN
- **NOTE:** For more information on setup and operation of Sidekick Pro ICD pumps, refer to the Sidekick Pro operation manual.



#### INTELLISPRAY™ TOOLS MENU OVERVIEW

System settings and information are displayed in four categories which may be viewed by selecting the tabs displayed along the top of the Tools Menu.



**NOTE:** If needed, press the help button on any screen for additional information.

Equipment Settings. Access the equipment settings to change the nozzle control mode, enable virtual section control, select tip sizes, verify section widths, or to restart the injection or Intellispray<sup>™</sup> System Calibration wizards.

System Settings. Adjust the following setting and feature categories for the main product or any of the injection products:

- User Settings
- Tank Fill Settings
- Alarm Settings
- Presets Settings
- Product Control Settings
- Pressure Settings

Product Controller Diagnostics. Access system information which may provide advanced diagnostic and control function information for the Intellispray<sup>™</sup> system.

System Information. Select to view details of the Intellispray<sup>™</sup> Product Controller II ECU such as hardware and software version numbers, run-time, or task controller connectivity.

Help

#### TOOLS MENU SETTINGS DEFINITIONS

#### EQUIPMENT SETTINGS TAB

To access the Equipment Settings Menu:



- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. Select the Tools Menu softkey along the right side of the display.
- 3. Select the Equipment Settings tab along the top of the display. The following settings may be viewed or modified:

	Page	è	1
$\sim$			

- Nozzle Control Mode
- Section Control Mode
- Boom
- NCV Tip Size
- Bypass Tip Size
- Calibrate NCV's
- Injection Wizard

#### Page 2

- Total Width
- Section Width
- Switch Mapping
- Flowmeter Cal
- Pressure Sensor
- Boom Offset
- Total Nozzles
- Valve Type
- Fence Rows
- Application Type
- Nozzle Spacing

#### NOZZLE CONTROL MODE

Select the desired Nozzle Control Mode (Standard, Bypass, On/Off, High Flow, or VP). Refer to the mode descriptions in the Chapter 2.

To Disable Nozzle Control:

**NOTE**: When nozzle control is disabled, the Intellispray<sup>™</sup> nozzle control valves will remain closed.

Be sure to open manual shut off valves on each nozzle body for the appropriate tip when Intellispray<sup>™</sup> nozzle control features are disabled.

If Nozzle Control Valves are installed on the machine, the NCV's must be manually bypassed at the boom or removed for the machine to operate properly when nozzle control is disabled. The system will then operate as a conventional sprayer with the Intellispray<sup>™</sup> Product Controller II ECU.

**NOTE:** The nozzle control mode can only be changed outside of a job. To change modes in a field: close the job, change the mode, and open the job again.

To disable nozzle control any time after the system has been calibrated:



- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. From the home screen, select the Tools Menu softkey along the right side of the display.
- 3. Select the Equipment Settings tab along the top of the display.
- 4. Select the Bypass option in the Nozzle Control Mode dropdown menu.

#### SECTION CONTROL MODE

Use the Section Control drop down field to select the section control mode (Virtual, Basic, or Nozzle Level).

- Basic section control will split the boom based on the number of sections that were entered in the calibration wizard. AccuBoom will open/close the section valves as well as NCV's.
- Virtual section control divides the existing sections into a maximum of 36 smaller sections with the smallest sections at the boom tips. AccuBoom will only open/close NCV's. A Master Switch is required to open/close the section valves.
- Intellispray<sup>™</sup> Nozzle Level section control will treat each nozzle like as an individual section. Requires Viper 4 or other task controller capable of individual nozzle control and Nozzle Level unlock on the PCII ECU. AccuBoom will only open/close NCV's. A Master Switch is required to open/close the section valves.
- **NOTE:** The section control mode can only be changed outside of a job. The system will default to Virtual section control if Nozzle Level section control is not unlocked.

#### BOOM

Displays the boom setup summary.

#### TIP SIZE OPTION

Use the tip size drop down field to select the size of orifice on the spray boom. This setting is used to assist with the application information displayed for the equipment operator during field applications. This setting will affect the speed range, the rate and pressure gauge displays, and ensure the nozzle control system accurately monitors the application of product during field operations. Entering a NCV tip size is mandatory but the bypass tip size is optional depending on the machine nozzle configuration.

#### CALIBRATE NCV'S

Select the Calibration NCV's button to restart the calibration wizard. Refer to Chapter 3, System Calibration, for additional assistance with completing the initial calibration of the Intellispray<sup>™</sup> nozzle control system.

Restarting Calibration NCV's does not reset the Intellispray<sup>™</sup> system default settings. Refer to System Information Tab section on page 35 for assistance with restoring default system settings.

#### INJECTION WIZARD

Select the Injection Wizard button to re-assign the Sidekick Pro ICD injection products. Refer to Injection Wizard section on page 15 for additional assistance with completing the setup of the Sidekick Pro ICD direct injection pumps.

Restarting injection wizard does not reset the Sidekick Pro ICD system default settings. Refer to System Information Tab section on page 35 for additional information on restoring default system settings.

#### TOTAL AND SECTION WIDTH DISPLAYS

Total Width. The total width value displays the sum of the currently programmed section widths.

- Section Widths. The widths of individual sections configured for the Intellispray<sup>™</sup> nozzle control system will be displayed below the total width.
- **NOTE:** Restart the calibration wizard to adjust or modify the section widths or the total width of the implement.

**Switch Mapping**. Sections mapped to a compatible switch box for manual section control will display using different color section width displays. Touch the Help icon on the Equipment Settings prompt to view a switch map legend.

NOTE: An ISOBUS boom interface/speed sense ECU, Product Controller II ECU, Raven ISOBUS switch box, or a bridge ECU must be connected with the Intellispray<sup>™</sup> system. To configure custom switch mapping, restart the calibration wizard by resetting Defaults, select the proper Machine Make, Select a Custom Profile, and follow the on screen prompts for assistance with mapping sections to switch box functions during the calibration wizard.

#### FLOWMETER CAL

Flowmeter Cal shows the current calibration number for the installed flowmeter.

#### PRESSURE SENSOR

Pressure Sensor shows the current allowable pressure range for the installed pressure sensor.

#### **BOOM OFFSET**

Boom Offset displays the set offset distance from the boom to the rear axle.

#### TOTAL NOZZLE COUNT DISPLAY

The number of nozzles detected on the Intellispray<sup>™</sup> nozzle control bus during the calibration wizard will be displayed in this field. If the nozzle count does not match the expected number of nozzles connected to the system, troubleshoot the nozzle control valve bus and restart the calibration wizard. Refer to Chapter 8, Troubleshooting, for additional troubleshooting assistance.

#### VALVE TYPE

Displays the valve type selected during machine configuration.

**NOTE**: Valve type can only be adjusted if a Custom boom profile in selected in the calibration wizard.

#### FENCE ROWS DISPLAY

If fence rows are enabled, the operator may use the left and right fence row switches to toggle fence row valves on or off during field applications. Restart the calibration wizard to change this setting.

NOTE: To allow the system to control fence row valves, the valves must be connected to the boom cable connections. Refer to the Intellispray™ installation manual provided with the nozzle control kit for additional assistance with the system installation and connection.

Fence Rows can only be adjusted if a Custom boom profile is selected in the calibration wizard.

#### **APPLICATION TYPE**

Displays the Application Type selected during machine configuration.

#### NO77LE SPACING DISPLAY

The nozzle spacing measurement set during the machine configuration is displayed in this field. This value, multiplied by the total nozzle count should equal the total width value.

#### SYSTEM SETTINGS TAB - USER SETTINGS

To access the User Settings Menu:



- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. From the home screen, select the Tools Menu softkey along the right side of the display.
- 3. Select the System Settings tab along the top of the display.
- 4. Select the User Settings button. The following settings may be viewed or modified:
  - Display Smoothing
  - External/RX Control

  - Override Seconds
  - NCV Performance
- Auto Section Control
- PWM High Side Drive
- Enable Turn Compensation
   Calibrate Turn Compensation
  - Enable Wireless Control
  - Speed Cal

#### **DISPLAY SMOOTHING**

Enable Display Smoothing to display target rate as actual rate when the rate is within 10% of the target rate. Actual rate will be displayed if the rate controller does not reach control deadband within ten seconds.

#### AUTO SECTION CONTROL

Allows section control in reference to coverage maps. When enabled, section control will automatically turn off an active section as it enters an area where product has been previously applied. As the section leaves the previously applied area, the section control feature turns the section back on.

NOTE: A task controller or UT capable of automatic section control is required to allow the Intellispray™ system to control sections automatically. If auto section control is not enabled, automatic section control commands from the task controller will be ignored. Refer to the manufacturer operation guides and materials for information on utilizing this feature.

- If the UT is capable of automatic section control and the section control feature is available in the Intellispray<sup>™</sup> Tools Menu, select the feature by placing a check mark in the corresponding box to enable the feature.
- If the UT is capable of automatic section control, but the section control feature is not available in the Intellispray<sup>™</sup> Tools Menu, the feature must be enabled from a different UT menu. Review the UT operation manual for assistance with the section control or task controller options.
- If the UT is not capable of automatic section control, Intellispray<sup>™</sup> will not automatically control sections regardless of the state of the section control feature on this screen. It is recommended to de-select or disable this feature when operating the Intellispray<sup>™</sup> system without automatic section control.

#### EXTERNAL/RX CONTROL

Enable External/RX Control to allow the field computer to modify target application rate based on prescription map and/or the task controller on-screen rate entry fields.

Refer to the UT operation manual for assistance with loading and selecting prescription rate information for field applications.

#### PWM HIGH SIDE DRIVE

Enables the valve driver to modulate the high side of the PWM valve and provide a constant ground return. Typically selected when using a PWM Boost Box.

#### ENABLE TURN COMPENSATION

The turn compensation feature automatically adjusts individual nozzle duty cycles when turning. The lowest NCV duty cycle should match Minimum Nozzle PWM value for innermost operating NCV in a turn. The highest NCV duty cycle may not be 100% due to maximum output capabilities of the NCV with a given tip size and system efficiency.

#### TURN COMPENSATION CALIBRATION

If the Intellispray<sup>™</sup> Product Controller II ECU mounting position is modified or adjusted, recalibrate turn compensation to ensure the feature correctly adjusts nozzle rates during applications and ensure that the Product Controller II ECU orientation is configured properly.

**NOTE:** The Product Controller II ECU orientation is calibrated during the initial system calibration wizard. To recalibrate the Product Controller II ECU gyro, restart the calibration wizard or perform the following procedure.

To recalibrate the turn compensation feature:



- 1. Move the equipment to a known level location.
- 2. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 3. Select the Tools Menu softkey along the right side of the display.
- 4. Select the System Settings tab along the top of the display.

5. Select the User Settings button and then select the Cal Gyro button. The system will recalibrate the Product Controller II ECU gyro and set the node orientation.

#### ENABLE WIRELESS CONTROL

Enable the wireless control feature to control pump and section valve functions, along with performing remote diagnostic applications, using a Bluetooth low energy device when outside the cab.

Refer to "Remote Diagnostics Application" on page 107 for more information on using the wireless control feature.

#### **OVERRIDE SECONDS**

Use the override seconds value to set the time which the system should override automatic section commands and keep sections on. This feature may be used when starting application with the equipment at a complete stop, or to manually override all sections on for the set number of seconds.

**NOTE:** The default on override value is 15 seconds. The override seconds valve can only be changed outside of a job from this location. If the user desired to change this value while in a job, use the on screen override widget on the Viper 4.

The override will only activate sections set for automatic section control. Any sections configured for manual control, or set on or off manually, will not be affected by the AccuBoom Override feature.

#### SPEED CAL

Enter the Speed Cal value of the radar speed sensor (if equipped). Refer to the radar manufacturer's specification for recommended value and perform distance calibration to ensure accuracy.

**NOTE:** Speed Cal value may not be present on systems that display a Boom Sense/Speed Menu Icon on the UT.

#### NCV PERFORMANCE

The NCV performance indicator displays the current System Efficiency value and High, Average, and Low NCV duty cycles for any active NCV's. These values can be displayed on the lower home screen if the system is equipped with NCV's and there are less than three injection products connected to the system.

For information on the System Efficiency value, refer to the "System Settings Tab - Alarm" on page 27.

The High and Low values will display the highest, average, and lowest active NCV duty cycles on the system. These values will turn red if the values reach the maximum or minimum flow output capabilities of the NCV's for a given spray tip size. The High value will be 100% or less due to the flow limitations of the selected spray tip. The Low value may display the minimum nozzle PWM value, defaulted to 25%, or greater. When the operator is driving in a straight line, the High, Average, and Low values should be within 1-2% of each other unless a flow offset is active for any NCV. When Turn Compensation is utilized, the High and Low values will be significantly different, indicating the outside NCV's are operating at a higher duty cycle than the inside NCV's. These values should correlate to the NCV Duty Cycle values for the outermost active NCV's. The Average value is an average duty cycle of all active NCV's. The system should be operated so that, when at optimal spray speed, the average value is maintained near 70% duty cycle. This will ensure optimal straight line and turn compensated spray coverage.

**NOTE:** This setting will not display in Bypass or On/Off Nozzle Control mode, if three or more injection pumps are present, or when the system is toggled in "Manual" application mode.

#### SYSTEM SETTINGS TAB - TANK FILL

To access the Tank Fill Settings menu for an injection product or the main product:



- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. From the home screen, select the Tools Menu softkey along the right side of the display.
- 3. Select the System Settings tab along the top of the display.
- 4. Select the Tank Fill Settings button. The following information will be available:
  - Full Refill Button

Tank Capacity

Tank Level

- Low Tank Limit
- Fill Meter Calibration Value and Units
- Max Tank Fill PWM
- NOTE: The tank fill prompt is also accessible by selecting the tank indicator on the Intellispray<sup>™</sup> lower home screen.
- 5. Select the Product tab that corresponds to the product being edited.

#### FULL REFILL BUTTON

Select to reset the current tank volume to the configured tank capacity. Use this button to quickly reset the tank volume when refilling tanks during field operation.

#### TANK CAPACITY

Enter the maximum tank capacity. Using the tank capacity and current tank level values, the tank indicator on the lower home screen will display the level of product remaining for the current application.



**NOTE:** Tank capacity value cannot be changed while in an application job.

#### TANK LEVEL

Enter the current tank level. This feature may be used to set the tank level manually upon refilling or use the tank fill meter to automatically increase the tank level at a level different from the capacity value, adjust the product volume if products are added through the top of the tank, or to correct the tank volume for a known volume of product added to the tank. Tank level automatically decreases according to the amount metered through the product flowmeter when applying the product.

#### LOW TANK LIMIT

Enable the Low Tank feature and enter the desired volume threshold at which an alert will be displayed for low tank condition.

**NOTE:** To provide low tank alarms during field applications, ensure the Low Tank option is enabled on the Alarms Setup screen. Refer to the System Settings Tab - Alarm section on page 27 for additional assistance with enabling the low tank alarm.
#### FILL METER CALIBRATION VALUE AND UNITS (TANK FILL ONLY)

The fill meter calibration, or meter cal, value and units may be found on the tag attached to the flow meter installed in the tank fill system. Be sure to select the appropriate units for the flow meter calibration to ensure proper calibration of the tank fill system.

NOTE: Raven flow meters use a meter cal in pulses per 10 gallons [37.9 L].

Copy the information from the tag for future reference as tags may fade or be lost during operation.

#### MAX TANK FILL PWM

The maximum PWM the product pump will run at while filling the product tank while using the remote tank fill feature.

#### SYSTEM SETTINGS TAB - ALARM

To access the Alarm Settings Menu:



- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. From the home screen, select the Tools Menu softkey along the right side of the display.
- 3. Select the System Settings tab along the top of the display.
- 4. Select the Alarm Settings button. The following information will display for the product number shown at the top of the screen:
  - Minimum Pressure
  - Off Target Pressure%
  - Sys Efficiency Limit
- Stuck Poppet
- Off Rate Limit
- Low Tank Limit

#### MINIMUM PRESSURE

The minimum pressure feature will allow the operator to set the lowest tolerable pressure during field operations. If the application system reaches the minimum pressure, the UT will display an alert and the application system will maintain the flow rate to keep the monitored pressure consistent and to maintain the spray pattern.

#### OFF TARGET PRESSURE PERCENT

The off target pressure percent sets the allowable difference between the target and actual pressures. Enable the off pressure feature and enter a non-zero value to set the allowable difference between target and actual pressures during field operations. If the difference between the actual and target pressure exceeds the set percentage for more than five seconds, the system will display an off pressure alarm.

#### SYSTEM EFFICIENCY LIMIT

The system efficiency limit feature allows the user to monitor system performance. The system will display an alarm in the actual efficiency exceeds the ideal efficiency by more than the set percentage. Typical efficiency may range from 90% - 105% during normal operation. System efficiency readings higher than 100% indicate that the system is delivering more flow than expected for a given NCV duty cycle. If the flowmeter and pressure transducer are calibrated and operating correctly, and the tip size is selected properly, there may be a system leak after the

flowmeter or a malfunctioning NCV. System efficiency readings less than 100% indicate they system is delivering less flow than expected for a given NCV duty cycle. There may be a restriction or flow delivery issue to the NCV's.

#### LOW TANK LIMIT

Enable the Low Tank Limit feature and enter the desired volume threshold at which a low tank condition alert will display. Enter a value of zero or uncheck the Enable box to disable the alarm. Manually set the tank volume upon refilling or the tank fill flowmeter will monitor the tank level.

#### STUCK POPPET

The stuck poppet alarm notifies the user if the NCV doesn't detect movement of the poppet. The NCV's must be assembly revision B or newer to support this feature. The revision level information is located on the NCV label.

#### SYSTEM SETTINGS TAB - PRESETS

To access the Preset Setup Menu:



- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. From the home screen, select the Tools Menu softkey along the right side of the display.
- 3. Select the System Settings tab along the top of the display.
- 4. Select the Preset Setup button. The following information may be available depending if the Intellispray<sup>™</sup> or Sidekick product tab is selected:
  - Rate 1 and 2 (Intellispray<sup>™</sup> and Injection)
  - Rate ± Bump (Intellispray<sup>™</sup> and Injection)
  - Quick Key Setup

- Pressure 1 and 2 (Intellispray<sup>™</sup>)
- Pressure ± Bump (Intellispray<sup>™</sup>)
- Use Gauges to Toggle Quick Key Selection
- 5. Select the desired product tab along the top of the display to change the products preset settings.

#### RATE 1 AND 2 PRESETS

Enter non-zero rate presets to allow the equipment operator to quickly switch between the set rates during field operations in the automatic product control mode. In some nozzle control modes, the pressure presets are disabled.

**NOTE:** Refer to the Quick Access Softkeys section on page 38 for additional assistance with using the rate preset and ± bump buttons during field operations. In manual control mode, the rate preset and ± bump buttons will be replaced with the pump PWM percent ± bump buttons.

#### PRESSURE 1 AND 2 PRESETS

Enter non-zero pressure presets to allow the equipment operator to quickly switch between the set pressures during field operations in the automatic product control mode. Pressure presets are disabled in some nozzle control modes.

**NOTE:** Refer to the Quick Access Softkeys section on page 38 for additional assistance with using the pressure preset and ± bump buttons during field operations. In manual control mode, the pressure preset and ± bump buttons will be replaced with the nozzle PWM percent ± bump buttons.

#### RATE AND PRESSURE ± BUMP VALUES

Sets the increment by which either the target rate or target pressure will increase or decrease when using the bump softkeys during an active application. In some nozzle control modes, the pressure bump is disabled.

A separate bump value may be set for the rate and pressure control features. Refer to the Use Gauges to Toggle Quick Key Selection section on page 29 for assistance with toggling between rate and pressure bump displays on the home screen.

**NOTE:** Review the Quick Key Setup Options section on page 29 and enable the  $\pm$  option in the Quick Keys area to display the rate or pressure bump softkeys when viewing the home screen.

#### QUICK KEY SETUP OPTIONS

Select the following quick key options to set the softkey options available during operation:

Rate. Toggle the quick key option to "Rate" to display the Rate preset softkeys when viewing the home screen.

- $\pm$  (Bump). Enable the  $\pm$  bump softkeys when viewing the home screen.
- **Pressure**. Toggle the quick key option to "Pressure" to display the Pressure preset softkeys when viewing the home screen.

#### USE GAUGES TO TOGGLE QUICK KEY SELECTION

Enable this option to use the rate or pressure gauges displayed on the home screen to toggle between the  $\pm$  bump and preset softkeys when viewing the home screen. This option allows the operator to quickly toggle between softkey functions without leaving the main operation display.

**NOTE:** The default selection for this feature is disabled.

#### SYSTEM SETTINGS TAB - PRODUCT CONTROL

To access the Product Control Settings Menu:



- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. Select the Tools Menu softkey along the right side of the display.
- 3. Select the System Settings tab along the top of the display.
- 4. Select the Product Control Settings button. The following information will be available:
  - Valve Type
  - Max Pump PWM
  - Pump PWM Frequency
  - Flowmeter Cal
  - Deadband

- Min Pump PWM
- Standby Pump PWM
- Minimum Nozzle PWM
- Response Sensitivity
- Product Type

#### VALVE TYPE

A PWM type control valve is preferred for proper operation of the Intellispray<sup>™</sup> nozzle control system. Fast Valve and Standard Valve are available with a second pressure transducer required for proper operation.

**NOTE:** This setting can only be changed during system calibration and cannot be changed from PWM unless a Custom Boom profile is selected.

#### MIN PUMP PWM

Enter a minimum pump PWM to set the minimum desired output (zero point or shutoff point) for a pump controlled by a pulse width modulated (PWM) hydraulic control valve. The default value is zero.

#### MAX PUMP PWM

Enter a maximum pump PWM to set the maximum desired output for a pump controlled by a pulse width modulated (PWM) hydraulic control valve. This setting limits how far the PWM valve will open. The maximum operating pressure of the Intellispray<sup>™</sup> nozzles is 80 PSI.

With the machine section and master switches in the on position, increase this value until the maximum desired pressure is reached in a liquid system.

#### STANDBY PUMP PWM PERCENT

Enter the desired pump PWM duty cycle percent when all sections are off. This is utilized when standby pressure control is not available (direct injection with a carrier check valve is installed). The default value is 42%.

#### PUMP PWM FREQUENCY

Used to set the coil frequency of the PWM valve (default is 60 Hz). Refer to the PWM control valve manufacturer specifications for recommended PWM frequency.

#### MINIMUM NOZZLE PWM PERCENT



Enter a minimum PWM percent to set the minimum desired output (zero point or shutoff point) for the Intellispray<sup>™</sup> nozzle control valves. With the machine master switch in the on position, decrease this value until the minimum desired spray pattern is reached in the liquid system. The default value is 25%.

NOTE: To help avoid under application or skips in coverage, review "Avoiding Skips with Intellispray™ Nozzle Control System" on page 69, and maintain the recommended application conditions.

#### FLOWMETER CALIBRATION VALUE AND UNITS

Enter the calibration value for the flow meter used to monitor the Intellispray<sup>™</sup> system product flow. The flowmeter calibration value and units are on the tag attached to the system flowmeter. Select the appropriate units for the flowmeter calibration to ensure proper application system calibration information.

Raven flow meters use a meter cal in pulses per 10 gallons [37.9 L].

#### **RESPONSE SENSITIVITY**

The response sensitivity controls how sensitive the system is to changes in pressure, flow, and speed. Decrease if the system pressure and rate oscillate slightly. Increase sensitivity if control is unresponsive. Avoid setting response rate and sensitivity above 70.

#### DEADBAND

Sets the allowable tolerance between the target rate and the actual application rate. Enter a value between 1 and 9. A value of 1 equals a  $\pm 1\%$  tolerance between the target and actual application rates where a value of 9 equals a ±9% tolerance. Default product control deadband is 1%.

#### PRODUCT TYPE

Select Water Based or Fertilizer. Intellispray™ will compensate for the different flow characteristics of each liquid.

NOTE: The meter cal may need to be adjusted when changing product types.

#### SYSTEM SETTINGS TAB - PRESSURE

NOTE: This tab will only show when a transducer is connected.

To access the Pressure Settings Menu:



- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. Select the Tools Menu softkey along the right side of the display.
- 3. Select the System Settings tab along the top of the display.
- 4. Select the Pressure Settings button. The following information will be available:
  - Response Rate

- Minimum Pressure
- Maximum Pressure

- Boom Pressure Calibration

Advanced Pressure Calibration

#### **RESPONSE RATE**

The response rate controls how fast the system adjusts pressure and rate output. Decrease response rate if system pressure and rate oscillate greatly. Increase if control is unresponsive. Avoid setting the response rate and sensitivity above 70.

#### MINIMUM PRESSURE

The minimum pressure feature requires a pressure transducer to monitor product pressure during application and will allow the operator to set the lowest tolerable pressure during field operations. If the application system

reaches the minimum pressure, the UT will display an alert and the application system will maintain the flow rate to keep the monitored pressure consistent and to maintain the spray pattern. Default is 20 PSI.

**NOTE:** The minimum pressure feature may result in higher than desired application rates. If the minimum pressure feature will be used during field operations, be sure to enter a value that will not interfere with normal target rates during field application.

#### MAXIMUM PRESSURE

The maximum pressure feature requires a pressure transducer to monitor product pressure during application and will allow the operator to set the highest allowable pressure during field operations. Enter the maximum desired pressure for the system. Upon exceeding maximum pressure, an alert will display, and the flow control will be overridden and the rate controller will maintain maximum pressure. For the Intellispray<sup>™</sup> nozzle control, the maximum operating pressure of the nozzles is 80 PSI (550 KPA).

**NOTE:** The maximum pressure feature may result in lower than desired application rates. If the maximum pressure feature will be used during field operations, be sure to enter a value that will not interfere with normal target rates during field application.

#### SPARGE PRESSURE CALIBRATION

This option will only appear if a transducer is detected. A sparge pressure transducer is required for Intellispray<sup>™</sup> system operation. Calibrates the sparge pressure transducer (if present) to a known value. The system will calibrate this automatically during the calibration wizard but the value can be adjusted at any time. Calibrate to a known pressure using a pressure gauge or turn the product pump off and open the section valves to relieve sparge pressure before resetting to zero.

Sparge Pressure Calibration is presented on the control valve selection on PWM and a second pressure transducer is detected on the sparge or system agitation line. This value can typically be controlled by an operator in the cab. For Fast or Standard valve operation, this value changes to Pump Pressure and represents the pressure at the pump. The system will control the Pump Pressure value if the master switch or all boom switches are Off.

#### BOOM PRESSURE CALIBRATION

This option will only appear if a transducer is detected. A boom pressure transducer is required for Intellispray<sup>™</sup> system operation. Calibrates the boom pressure transducer (if present) to a known value. The system will calibrate this automatically during the calibration wizard but the value can be adjusted at any time. Calibrate to a known pressure using a pressure gauge or turn the product pump off and open the section valves to relieve boom pressure before resetting to zero.

#### PRESSURE TRANSDUCER CALIBRATION

To calibrate the Intellispray<sup>™</sup> system pressure transducers:

- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. Select the Tools Menu softkey along the right side of the display.
- 3. Select the System Settings tab along the top of the display.
- 4. Select the Pressure Settings button.
- 5. Verify the Pressure Type and Transducer Type selections.
- 6. Zero the transducer at ambient air pressure. Refer to the Advanced Transducer documentation provided with the equipment, or contact the equipment manufacturer, for assistance with bleeding pressure from the application system.
- **NOTE:** If the Intellispray<sup>™</sup> system came installed on the equipment from the equipment manufacturer, or if a sparge pressure transducer is installed with the Intellispray<sup>™</sup> control system, check the transducer

specifications and refer to the Advanced Transducer Calibration to verify transducer settings before operating the Intellispray<sup>™</sup> nozzle control system during field applications.

#### ADVANCED TRANSDUCER CALIBRATION

Navigate to the second page of the Pressure Settings menu to access the following settings:

- Pressure Type. Select the pressure type drop down field and select the boom or sparge transducer to be calibrated for Intellispray<sup>™</sup> operation.
- Transducer Type. Select the transducer type drop down field and select the range for the transducer used with the Intellispray<sup>™</sup> system. The following options are available for calibrating the Intellispray<sup>™</sup> nozzle control system:
  - Raven (0-250) Pressure transducer supplied with after-market Intellispray<sup>™</sup> systems. This option is the default transducer type setting.
  - Other (0-150) Before selecting this option, check the specifications of the pressure transducer used to monitor application with the Intellispray<sup>™</sup> nozzle control system.
  - Custom (set custom transducer limits) If neither of the above options match the transducer specifications, select the custom option to set the limits for the pressure transducer used with the Intellispray<sup>™</sup> nozzle control system.

Pressure Calibration. Enter the gauge pressure or recalibrate the transducer for ambient air pressure.

#### CONTROLLER DIAGNOSTICS INFORMATION TAB

The controller diagnostics tab provides status information for the Intellispray<sup>™</sup> Product Controller II ECU and may be helpful when troubleshooting the system. To access Intellispray<sup>™</sup> system Diagnostic Information:



- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. From the home screen, select the Tools Menu softkey along the right side of the display.
- 3. Select the Diagnostics Info tab along the top of the display. The following controller information will be displayed:
  - HC Voltage
  - Logic Voltage
  - System Efficiency
  - Pump Duty Cycle
  - Tank Fill Sense
  - Flow Pulses
  - ECU Yaw Rate
  - NCV CAN Errors
  - Serial Number
  - Pressure Signal

- Orifice Constant
- Pressure Offset
- NCV #
- ISO Can Errors
- Orientation
- NCV System State
- Total Nozzles
- Voltage
- Version

**HC Voltage**. The voltage for the high current bus circuit. High current power is provided system components to actuate control features such as opening valves or nozzles. Normal values range from 10.5 - 16 VDC.

Logic Voltage. Internal Product Controller II ECU voltage used for processing application data and rate control commands. The logic voltage value should display 4.8V or higher for normal operation of the Intellispray<sup>™</sup> Product Controller II ECU and the Intellispray<sup>™</sup> nozzle control system.

Pump Duty Cycle. Displays the current carrier pump output percentage.

Tank Fill Sense. Tank Fill Sense values change from 0 - 100% when the system senses a remote tank fill is in progress.

**Flow Pulses.** Displays flow pulses received from the system flowmeter. This value should be above zero when product is flowing through the flowmeter.

- ECU Yaw Rate. Represents the current turn rate of the vehicle and Intellispray<sup>™</sup> Product Controller II ECU. This value is used for turn compensation and will change to a positive value when turning right and a negative value when turning left. This value should be at, or near, zero when the vehicle is stationary.
- **System Efficiency**. The system efficiency allows the user to monitor system performance. Typical efficiency may range from 90% 105% during normal operation.

**Pressure Signal**. Displays pressure signal as a voltage from the boom pressure transducer. The value should be not be zero when the boom is pressurized.

**ISO CAN Errors.** This value counts the number of CAN errors the system has encountered on the primary ISO CAN bus. The value should remain constant under normal operation. If the value rapidly increases, inspect the ISObus for damage components or connections.

**NCV CAN Errors.** This value counts the number of CAN errors the system has encountered on the NCV CAN bus. During normal operation.

- **Orientation**. Displays the orientation number of the node pointing down. This number is used to calibrate the system gyro for turn compensation.
- DTC List. The diagnostic trouble code (DTC) list provides a list of recent errors for the equipment operator. Access the DTC list to review previous error conditions, as well as a tally of each condition, during operation of the Intellispray<sup>™</sup> nozzle control system.

Refer to Chapter 8, Troubleshooting, for additional assistance with diagnostic trouble codes and using the DTC list.

- NCV System State. Displays the current state of the NCV's. This might change if the NCV's are calibrating or operating. Information such as the NCV number, NCV serial number, voltage, and NCV version are all visible on this page.
- **Total Nozzles**. The number of NCV's detected by the system. After the system is fully calibrated, the total number of nozzles should match the total NCV's on the system.
- **NCV** #. The NCV number will populate correctly from left to right along the boom when all NCV's are calibrated.

Serial Number. This will populate with the individual NCV serial numbers detected before or after calibration.

Voltage. This will populate with the individual NCV voltage if it is calibrated.

2-Diagnostic INFO HEV CAN EFFATAL 8 Cv System State: NCvy Sypanned Total morries: 40 SN Voltage ersion 1220 112138 13 0 V 1.3.2 112219 13.0 - V 1.3.2 111665 12.9 V 1.3.2 112029 12.9 19.12 

Version. This will display the software version of the NCV after it is calibrated.

#### SYSTEM INFORMATION TAB

To access the System Information Menu:



- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. From the home screen, select the Tools Menu softkey along the right side of the display.
- 3. Select the System Information tab along the top of the display. The following information will be available:
  - ECU Part Number
  - Hardware Serial Number
  - Software Version
  - Version Hours
  - Wireless
  - Wireless ID
  - PCB Part Number
  - Task Controller Status

- Software Part Number
- Bootloader Version
- Version Hours
- Total Runtime Hours
- CAN Address
- ECU Revision
- PCB Revision
- **NOTE:** This information is for display purposes only and may be useful when contacting technical support.

#### WIRELESS

Shows the status of the connected wireless device. Unknown will display if no device has been connected. Connected will display if the device is connected but not in control. Active will display if the device is connected and in control.

#### WIRELESS ID

Displays the internal wireless module. This value will be displayed on the wireless diagnostics application when trying to connect to Intellispray<sup>™</sup> Product Controller II ECU.

#### RESET DEFAULTS

Select the reset defaults button to restore the default system settings. All user settings will be reset and the initial calibration wizard must be completed before operating the Intellispray<sup>™</sup> nozzle control system.

**NOTE:** Prior to performing a software update, record all settings in the "Calibration Reference Sheet" on page v. After the update is complete, reset the system defaults and recalibrate the system.

#### FEATURE UNLOCKS

Unlocks allow the user to activate features through the use of an activation key. Unlocked features are visible on the feature unlock screen. Contact a Raven dealer for information on acquiring feature unlocks.

#### SERVICE MENU

Provides advanced features and options to assist with systems diagnostics or tuning the Intellispray<sup>™</sup> nozzle control system. The service menu should only be used by a trained New Holland service technician.

Contact a local New Holland dealer for assistance with the Intellispray<sup>™</sup> nozzle control system if necessary.

## CHAPTER OPERATION

## 5

## **OPERATION CHECKLIST**

To begin applying product using the Intellispray<sup>™</sup> nozzle control system:

- 1. Verify that nozzle control is enabled.
- 2. Verify the proper control mode (Standard, Bypass, On/Off, High Flow, High Flow VP, or VP) is enabled.
- 3. Set to the desired target rate.
- 4. Verify the nozzle tip size selection for the Intellispray<sup>™</sup> nozzle control system.
- 5. Verify the product type (Water Based or Fertilizer). Refer to the System Settings Tab Product Control section on page 29.
- 6. Set the desired target pressure. Refer to the Target Pressure section for additional information.

NOTE: Target pressure is not available in VP, High Flow VP, ON/OFF, and Bypass modes.

- 7. If the machine is equipped with a master tank valve, verify the tank valve is open to direct flow to the carrier pump.
- 8. If the machine is equipped with a toggle switch to engage the pump, it may be necessary to engage the switch before using the Engage Pump softkey on the Intellispray<sup>™</sup> screen.
- 9. Select the product pump softkey to toggle the product pump on. Refer to the Main Product Pump Switch section for additional information.
- 10. For systems with Sidekick Pro ICD injection, select the product selection button for the desired injection pump in the lower home screen. Select the product on/off button in the upper home screen to turn the injection product on with the master switch.
- 11. Toggle the equipment master switch to the on position.

## INTELLISPRAY<sup>™</sup> HOME SCREEN DEFINITIONS

To access the Intellispray<sup>™</sup> home screen, select the Intellispray<sup>™</sup> Menu button on the UT Menu.





FIGURE 1. Home Screen

Depending upon the mode and system options, the following display areas, information prompts, and features may be accessible via the Intellispray<sup>™</sup> home screen:

Softkeys Area	Rate and Pressure     Target Values	Rate and Pressure     Gauges	• Master Switch Status Display
<ul> <li>Application Mode Selector</li> </ul>	• Alarm Status Display	Volume Applied Tally	Area Covered Tally
Product Select Buttons	Tank and Section Status     Display	On-Screen Section     Controls	• Home Screen Toggle

## QUICK ACCESS SOFTKEYS

The quick access softkeys allows the operator to quickly access frequently used functions, calibration settings, and status displays during operation. Review the following sections for additional information on softkey functions.

#### MAIN PRODUCT PUMP SWITCH

The status of the product pump is always displayed in the softkeys area. Select the pump status indicator to toggle the main product pump on or off during field applications.



Pump On

NOTE: Both the master switch and the product pump softkey must be toggled on to apply product. If the machine has an additional switch to open a master tank valve and/or turn on the main product pump, ensure the machine's switch is turned on before the on-screen softkey is used and the master switch is toggled on to

switch is turned on before the on-screen softkey is used and the master switch is toggled on to prevent pressure spikes in the system when starting application.

Injection

Injection

#### ± BUMP

While applying in the automatic control mode, the operator may elect to display the  $\pm$  rate or pressure bump softkey in the softkeys area. Select these softkeys to manually increase or decrease the target rate or pressure settings by the  $\pm$ value set on the presets settings prompt.

Refer to the System Settings Tab - Presets section on page 28 for additional assistance with the rate and pressure  $\pm$  values

and using the rate or pressure gauges on the home screen to toggle between the rate and pressure ± softkeys.

#### PRESET

While applying in the automatic control mode, the operator may select to display the rate or pressure preset softkey in the softkeys area. Select these softkey to manually toggle between two preset rates or pressures set using the presets settings prompt.

Refer to the System Settings Tab - Presets section on page 28 for additional assistance with the rate and pressure preset values and using the rate or pressure gauges on the home screen to toggle between the rate and preset softkeys.

#### MAIN PUMP MANUAL CONTROL

In the manual control mode, the rate  $\pm$  bump and preset softkeys are replaced with manual pump  $\pm$  buttons. Select these softkey to manually increase or decrease the main product pump or injection pump output during a field application. The Main Product Pump Manual Control softkeys are replaced by the Injection Pump Manual Control Softkeys when the injection pump product is selected.

The system will continue to monitor and display the actual application rate on the home screen.

#### MANUAL NO77LE CONTROL BUTTONS

In manual control mode, the pressure  $\pm$  bump and preset softkeys are replaced with manual nozzle ± softkeys. Select these softkeys to manually increase or decrease the nozzle control valve duty cycle during a field application.

The Intellispray<sup>™</sup> system will continue to monitor and display the actual system pressure on the home screen.

#### TOOLS MENU

Select the Tools Menu softkey to access the calibration prompts. See Chapter 4, Intellispray™ Nozzle Control and Sidekick Pro ICD Setup, for additional assistance with system calibration, features, and settings.







Nozzle Control



Pressure

Rate

Increase



Increase

Decrease

### TALLY REGISTERS

Select Tally Registers to view the volume and area tallies since the register was last reset. See Chapter 6, Tally Registers, for additional assistance with the tally registers features.

### NOZZLE DIAGNOSTICS

Select Nozzle Diagnostics to access nozzle diagnostic information and settings such as nozzle control valve status or selecting the tip size for Intellispray<sup>™</sup> operation. Refer to Chapter 7, Nozzle Control Valve Diagnostics, for additional assistance with the Intellispray<sup>™</sup> Nozzle diagnostics prompts.

**NOTE:** This button also indicates the nozzle control mode. The images below show the nozzle control mode.



### UPPER HOME SCREEN

The upper portion of the Intellispray<sup>™</sup> home screen displays the application information for the selected product as well as the units in which the information is displayed. Review the following sections for assistance with the rates information and display on the Intellispray<sup>™</sup> home screen.

#### FIGURE 2. Intellispray<sup>™</sup> Upper Home Screen









FIGURE 3. Intellispray<sup>™</sup> with Injection Upper Home Screen

#### AREA APPLIED

The field area applied tally is displayed in the application area for quick reference of the area covered during the current operation.

**NOTE:** Volume Applied may not be available on the Home Screen if additional products are on the system. Access the Volume Applied by selecting tally registers button from the softkeys area. Refer to Chapter 6, Tally Registers, for additional assistance with using the field and total area covered registers.

#### TARGET RATE

Select the target value to enter the desired target rate for product application (e.g. 15 gallons per acre [140 liters per hectare]).

#### RATE GAUGE

The rate gauge provides a visual representation of the actual application rate and displays the allowable rate deadband during field applications.

**NOTE:** Refer to the System Settings Tab - Alarm section on page 27 for assistance with setting the rate gauge deadband or the Flow Meter Maintenance section on page 87 for additional assistance with calibrating the flow meter.

If the Use Gauges to Toggle Quick Key Selection option is enabled, touch the rate gauge to toggle between the rate preset and rate ± bump buttons in the softkeys area. Refer to the System Settings Tab - Presets section for additional assistance with the rate and pressure presets options.

#### APPLICATION MODE

The application mode indicator displays the selected mode for product control. Select the "Auto/Manual" button to toggle the application mode between automatic (Auto) and manual (Manual). The active mode will display.

#### FIGURE 4. Manual/Auto Toggle

- Manual. Allows the operator to manually adjust the pump and nozzle PWM output to control the system rate and pressure. Select the pump increase or decrease buttons while viewing Intellispray<sup>™</sup> home screen to manually increase or decrease the pressure.
- Automatic. Allows the product control system to automatically acquire and maintain the set target application rate and pressure. Use the ± bump or preset buttons to adjust the target rate or pressure during field applications.

Selected Injection Product On/Off. This button with toggles the selected injection product on or off.

NOTE: The product must be on before the injection pump will operate with the Intellispray<sup>™</sup> system.

#### CURRENT VEHICLE SPEED AND APPLICATION SPEED RANGE DISPLAY

Intellispray<sup>™</sup> displays the current vehicle speed on the Intellispray<sup>™</sup> home screen. Above the vehicle speed display, Intellispray<sup>™</sup> provides the operator with the application speed range. This range is provided as the optimal range to maintain the target rate and pressure settings. If the application speed exceeds this range, alarm conditions may occur and the Intellispray<sup>™</sup> nozzle control system may be unable to maintain the desired application rate or pressure. Refer to "Avoiding Skips with Intellispray<sup>™</sup> Nozzle Control System" section on page 69 for additional information about maintaining coverage during application and application speed ranges with the Intellispray<sup>™</sup> nozzle control system.

NOTE: The ranges for speed and flow rate provided in the "Avoiding Skips with Intellispray™ Nozzle Control System" section on page 69 are for reference purposes only. Actual speed ranges will depend on the main product pump performance, system plumbing configurations, and specific spray tip flow characteristics. Displayed speed range minimum is 10% greater than the actual minimum. The displayed speed range maximum is 10% less than actual maximum speed. For best system performance operate the system within the displayed speed range.

#### TARGET PRESSURE

Select the target value to enter the desired target pressure for product application (e.g. 45 PSI [310 kPa]). For systems with injection, the pressure reading displays the current carrier pressure readout when an injection product is selected.

**NOTE:** Not available for VP, On/Off, High Flow VP, and Bypass modes.

#### PRESSURE GAUGE

When the Intellispray<sup>™</sup> product is selected, the pressure gauge provides a visual representation of the actual boom or sparge pressure and displays the allowable pressure deadband during field applications.

**NOTE:** Refer to the Boom Pressure Calibration section on page 32 for additional assistance with calibrating the pressure transducer or configuring the pressure deadband.

If the Use Gauges to Toggle Quick Key Selection option is enabled, touch the pressure gauge to toggle between the pressure preset and pressure ± bump buttons in the softkeys area. Refer to the System Settings Tab - Presets section on page 28 for additional assistance with the rate and pressure presets options.

When an injection product is selected, the pressure gauge displays the pressure at the injection pump.

#### INJECTION PUMP EFFICIENCY

The injection pump efficiency value indicates the performance of the selected injection pump. Values may vary based on pump performance and product being applied. The acceptable limit is set in the injection alarm settings tab.

#### LOWER HOME SCREEN

The lower portion of the Intellispray<sup>™</sup> home screen provides on-screen indicators for alarm status, switch status, remaining tank volume, the volume of product applied for the selected product during the field operation. Refer to the following sections for additional information regarding the information provided in this area of the Intellispray<sup>™</sup> home display.



#### FIGURE 5. Intellispray<sup>™</sup> Virtual Lower Section Home Screen

FIGURE 6. ntellispray HD with Injection Lower Home Screen



#### PRODUCT SELECTS

Product Selects shows the target application rate if the product is calibrated and the product is toggled on, and the actual rate for each product being applied when the master switch is on. Select the product to make changes to a product. PR1 is reserved for the Intellispray<sup>™</sup> system. PR2 - PR6 are used for additional injection products.

LO

#### DTC ALARMS STATUS INDICATOR

The alarm indicator provides a visual status of the Intellispray<sup>™</sup> Nozzle Control System and Sidekick Pro ICD injection pump alarms during field applications. The alarm status indicator provides the following display states:



system is not responding as expected and the operator should cease application and troubleshoot the issue before resuming operations. The system will not apply in this state

NOTE: Touch the Alarms Status indicator to quickly access the diagnostic trouble code (DTC) List and review any current or previous alarm condition information. Refer to Chapter 8, Troubleshooting, for additional assistance with diagnostic trouble codes and using the DTC list.Intellispray<sup>™</sup>

#### TANK VOLUME INDICATOR

The system provides a calculated volume of product remaining in the tank as a tank indicator in the application information area. Select this indicator to access the Tank Fill Config prompt.

**NOTE:** A tank capacity value must be entered to allow the tank volume indicator to display the tank level.

#### VOLUME APPLIED

Volume applied is for quick reference of the volume of product dispensed during a field operation. The field volume tally is displayed if there are less than three injection products and the NCV Performance Indicator is off.

**NOTE:** Tally registers from the softkeys area and refer to Chapter 6, Tally Registers, for additional assistance with using the field and total volume registers.

#### SECTION STATUS DISPLAY

The Intellispray<sup>™</sup> system provides the status of each configured section on the home display. For standard Intellispray<sup>™</sup> section control, or Intellispray<sup>™</sup> Virtual Section mode, the boom valve section will be a rectangle above triangles representing the nozzle control sections. The triangles will change color when the section is turned on. For Intellispray<sup>™</sup> HD mode, the rectangles represent the boom valve and nozzle



control sections and the rectangles will change color when the boom valve section is on.

- **NOTE:** Refer to Chapter 3, System Calibration, and restart the calibration wizard to configure implement sections.
- Manually disabled sections will be displayed without a section status indicator below the section.

Sections enabled for product application will display a status below the section.

44



51

dal

- Sections automatically controlled off according to task controller commands will display with an empty status indicator. The task controller will automatically enable the section when the section returns to an unapplied area in the field application.
- When the application system is enabled, the indicator for each section actively applying will be filled in. Task controller may automatically shut off the section based upon the application coverage map.

#### WHEEL TRACK PROFILES



These icons will only appear if a nozzle flow offset is entered and a valid machine profile is selected.

Left. The eight nozzles on the far left of the boom will increase flow by the user entered nozzle flow offset percentage.

**Extended**. The eight nozzles behind the tires when the wheels are extended will increase flow by the user entered nozzle flow offset percentage.

**Retracted**. The eight nozzles behind the tire when the wheels are retracted will increase flow by the user entered nozzle flow offset percentage.

**Right**. The eight nozzles on the far right of the boom will increase flow by the user entered nozzle flow offset percentage.

#### **ON-SCREEN OVERRIDE**

Use the override button at the bottom of the Intellispray<sup>™</sup> home screen to override all sections for the configured override time. After the override time expires, the task controller will resume automatic operations based upon previous section coverage.

Refer to the Tools Menu Settings Definitions section on page 20 for additional assistance with the override seconds setting if necessary.

#### SYSTEM EFFICIENCY

This information is only available when less than three injection pumps are on the system. Normal operating values should be between 90 - 105% for various sprayer models. System



efficiency may change slightly in a turn when the turn is tighter than the spray boom is capable of without some nozzles operating at the set minimum nozzle PWM (minimum NCV duty cycle). System efficiency generally increases when NCV duty cycle drops below the expected theoretical value, indicating more than expected flow is being provided for an expected NCV duty cycle at a given target rate, pressure, and tip size. Examples include when there is a leak, tip size is too large, flowmeter calibration value is too low, pressure calibration value is too high, a poppet is stuck open or excessively worn, a fencerow output is turned on, or a spray tip is excessively worn or missing. System efficiency generally decreases when NCV duty cycle is higher than the expected theoretical value indicating less than expected flow is being provided for an expected NCV duty cycle. Examples include a boom valve not opening, a tip size too small, flowmeter calibration too high, pressure calibration value is too low, a poppet is stuck closed or not opening completely, or a spray tip is obstructed.

#### NCV PWM STATUS

This information is only available when less than three injection pumps are on the system. Values for High, Avg, and Low should increase or decrease as expected for changes in speed, target rate, in a turn, and when a flow offset is enabled. Values go to zero when master switch or all boom switches are off. Values should be the same as what the outermost operating NCV reports for Duty Cycle%. Values turn red when

NCV	ΡWΜ
High	Θ
Avg	Θ
Low	Θ

NCV's are at their maximum and minimum outputs. Maximum output may not be 100% due to maximum output capabilities of the NCV's for a given tip size and system efficiency. Minimum values should be the same as the minimum nozzle PWM value or the innermost operating NCV in a turn.

# CHAPTER TALLY REGISTERS 6

## USING TALLY REGISTERS



- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. From the home screen, select the Tally Registers softkey along the right side of the display.

### **RESETTING A REGISTER**

To reset a register:



- 1. Open the UT Menu and select the Intellispray  ${}^{\rm M}$  Menu button.
- 2. From the home screen, select the Tally Registers softkey along the right side of the display.
- 3. On the Totals Data tab, select the Reset button for the register to be reset.
- 4. Accept the confirmation prompt to reset the select register.
- 5. Repeat the above process to reset other tally registers as desired.

## TALLY REGISTER DEFINITIONS

The Raven Intellispray<sup>™</sup> system provides the following registers:

- Task Lifetime
- Distance
   Device
- Flow Rate
   Area

In addition to the area and volume tallies, the tally registers screen also displays the distance traveled and the current volume per minute and area per hour.

#### TASK TALLIES

The task area and volume registers allow the operator to keep a running tally of product application in a specific field or over a short duration of application such as a day or week.

#### LIFETIME TALLIES

The lifetime area and volume registers are intended to keep a running tally of a longer term of application data (i.e. product application over a week, month, or season).

#### DEVICE STATS

The device area and volume statistics register keeps a running tally of the operating life of the Intellispray<sup>™</sup> system. This tally cannot be reset by the machine operator.

#### DISTANCE

The distance register functions as a Intellispray<sup>™</sup> system odometer and provides a distance traveled since the last time the distance register was cleared. The distance register display may also be helpful when fine tuning the Intellispray<sup>™</sup> system or to assist with troubleshooting procedures.

#### FLOW RATE DISPLAY

During product application, the current volume of product applied per minute is displayed on the Totals Data tab. This value may be helpful when fine tuning the Intellispray<sup>™</sup> system or to assist with troubleshooting procedures.

#### AREA/HOUR DISPLAY

The current area covered per hour is available on the Totals Data tab. This value may be helpful to check the Intellispray<sup>™</sup> system calibration or to assist with troubleshooting procedures.

## CHAPTER NOZZLE CONTROL VALVE DIAGNOSTICS 7

## NOZZLE CONTROL VALVE DIAGNOSTIC DEFINITIONS

## SECTION DIAGNOSTICS PROMPT

To access Intellispray<sup>™</sup> nozzle control valve diagnostics information by configured section:



- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. From the home screen, select the Nozzle Diagnostics softkey along the right side of the display. The following settings and information may be displayed for each configured section:
  - Section

- Nozzle Spacing
- Nozzle Flow Offset%
- Section Nozzle Status
- FIGURE 1. Advanced Nozzle Diagnostics



#### CURRENT SECTION DISPLAY

The current section for which diagnostic information is being displayed is shown at the top of the nozzle diagnostics prompt. Select the left or right section select arrow buttons to cycle through sections configured for use with the Intellispray<sup>™</sup> nozzle control system.

#### NOZZLE SPACING

The nozzle spacing value set during the calibration wizard is displayed on the diagnostics prompt. Verify this value matches the tip spacing on the equipment to ensure accurate application of products during field operations.

#### SECTION NOZZLE STATUS

The status of each nozzle configured for control on the section is displayed at the bottom of the section diagnostics prompt. The following nozzle statuses may be displayed while viewing the section diagnostics prompt:

<b>Normal</b> . The nozzle is functioning normally and no alarm conditions are currently present.
<b>Caution</b> . A minor nozzle alert condition has been detected. The control system and nozzle PWM is operating normally, however, the system has detected that a condition exists which could impact the current application.
<b>Critical.</b> A critical nozzle condition has caused the nozzle to shut down. The nozzle is not responding as expected and the operator should cease application and troubleshoot the issue before resuming operations.
Not Calibrated. The nozzle section is not calibrated.

**NOTE:** Refer to Chapter 8, Troubleshooting, for additional assistance with diagnostic trouble codes and using the DTC list.

#### NOZZLE SELECT

Press the nozzle select arrow to cycle through each individual nozzle status and diagnostic information in the advanced diagnostics screen.

#### NOZZLE FLOW OFFSET %

The Flow Offset feature allows a limited number of nozzles to provide additional flow (Ex. nozzles in line with the sprayer wheel tracks). The Nozzle Flow offset percentage value sets how much the nozzle will deviate from nominal flow. See the Individual Nozzle Diagnostics section on page 50 for additional information.

**NOTE:** NCV offset percentage entries greater than zero will provide additional softkey options that allow use of flow offset profiles on the run screen.

#### INDIVIDUAL NOZZLE DIAGNOSTICS

To access individual Intellispray<sup>™</sup> control nozzle diagnostic information:



- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. Select the Advanced Diagnostics softkey in the desired section.

#### FIGURE 2. Advanced Nozzle Diagnostics

	N	ozzl	e 1			×	Exit Diagnosti Screen	CS
current:	0.0	ô	System Pressure:	1	PSI			
NCV Duty Cycle:	0	2	Nozzle S/N:	1101	72			
Estimated Flow:	0	oz/min	Program Ver:	1.3.	2			
Target Flow:	0	oz/min	CAN Address:	0×50				
Driver Temp:	33	° C	Runtime Hours:	0				
Micro Temp:	29	*c	Pump Duty Cycle:	0	%			
Flow Offset Enable								
No	zzle	Select	ŀ					

- 3. Select the Advanced Diagnostics button in the upper, left corner of the Nozzle Diagnostics prompt to access the following diagnostic information for each nozzle:
  - Current
  - Voltage
  - NCV Duty Cycle
  - Estimated Flow
  - Target Flow
  - Driver Temp
  - Micro Temp
  - Flow Offset Enable

- System Pressure
- Hardware Rev
- Nozzle Serial Number
- Program Version
- CAN Address
- Runtime Hours
- Pump Duty Cycle
- **NOTE:** Use the left and right arrow buttons at the bottom of the nozzle prompt to view different nozzles.

#### NOZZLE OPERATION INFORMATION

- Current and Voltage. Each nozzle control valve provides the measured current, in amperes, and voltage at the nozzle to the Intellispray<sup>™</sup> main Product Controller II ECU for display. Current should be 0.0 Amps when selected NCV is off, and should be .3 .7 Amps during normal operation. Voltage should be 10.5 16.0 V during normal operation.
- NCV Duty Cycle. Each nozzle reports the current nozzle duty cycle over the communication network. Values should increase or decrease as expected for changes in speed, target rate, in a turn, and when a flow offset is enabled. Values go to zero when master switch or all boom switches are off. Values should be the same as what the outermost operating NCV's report on the NCV PWM Status display. Maximum output may not be 100% due to maximum output capabilities of the NCV's for a given tip size and system efficiency. Minimum values should be the same as the minimum nozzle PWM value or the innermost operating NCV in a turn.
- Estimated Flow. The estimated flow rate through each nozzle is reported to the Intellispray<sup>™</sup> main Product Controller II ECU.

Target Flow. The target flow rate per nozzle for the current application.

**Driver Temp and Micro Temp.** Component temperatures on the Intellispray<sup>™</sup> nozzle control valve circuit board. These values should be below 40° C during normal operation.

System Pressure. The monitored system pressure reported by the Intellispray<sup>™</sup> spray boom pressure transducer.

Hardware Rev. This is the PCB hardware revision level of the NCV. This is not the same as the assembly revision level which is shown on the NCV label.

- **Nozzle Serial Number**. The nozzle serial number for each nozzle is available on the nozzle diagnostics prompt. This information may be used to help locate specific nozzles on the implement.
- **Program Version**. The version of software loaded on each nozzle. This information may be helpful to troubleshoot individual nozzles or to ensure proper operation of the nozzle control system.
- **CAN Address.** The unique identifier assigned to each nozzle for communicating on the nozzle system is displayed on the diagnostics prompt.
- Runtime Hours. The runtime tally for each nozzle. Use this information to log the hours run and to help schedule and track maintenance on each nozzle on the Intellispray<sup>™</sup> control system.
- Flow Offset Enable (Wheel Tracks): Check this box to increase the flow rate of any eight nozzles anywhere on the boom to achieve optimal coverage in the turbulent air conditions behind vehicle wheels. The offset percentage compared to the rest of the nozzles is set in the upper diagnostics window (Nozzle Flow Offset%). The maximum offset is 30%.
- **NOTE:** When a predefined wheel track profile is selected, the flow offset enable box is automatically checked for the affected nozzle.

## CHAPTER TROUBLESHOOTING 8

## INTELLISPRAY<sup>™</sup> NOZZLE CONTROL VALVE STATUS

FIGURE 1. Nozzle Control Valve LED



#### TABLE 1. Nozzle Control Valve LED Status Indicator

LED Indicator	Rate	Color	State
		Green	Ready. If in actuating mode, the NCV is ready but requires calibration.
	1 Hz	Blue	Actuating Mode (Auto)
Flashing		Red	Loading New Software
		Amber	Alarm Active
	5 Hz	Amber	No ISOBUS Communication
		Blue/Green	Actuating Mode (Manual)
		Green/Magenta Red/Magenta	Not Calibrated - Switch Input High
A.1	1 山-		Not Calibrated - Switch Input has not Changed
Alternating	1112	Amber/Red	No Product Controller II ECU Detected or Invalid ISO Name
		Amber/Green	Ready - Warning Alarm Active
		Amber/Blue	Actuating Mode - Warning Alarm Active
Solid	-	Any	Nozzle Control Valve Failure

## NOZZLE TECHNICAL SPECIFICATIONS

TABLE 2 Intellispray	/™ Nozzle Co	ntrol Valve Tec	hnical Specifications
TADLE Z. Intemspia			initial opecifications

		U.S.	Metric			
	Height	3.8 in.	9.65 cm			
<b>.</b>	Width	1.39 in.	3.53 cm			
Dimensions	Depth	1.35 in.	3.43 cm			
	Weight	approximately 7.1 oz.	approximately 0.2 kg			
D	Operating Voltage	13.6 V DC nominal				
Power	operating voltage	(10 V drop-out to 16 V spike tolerant)				
	CAN	CANBUS 2.0 Compliant				
Input/Output	Switched (In/Out)	3V.				
	Operating Conditions	-22° to 140° F	-30 to 60° C			
Environmental	Storage Conditions	-40° to 158° F	-40° to 70° C			
	Relative Humidity		10 to 95% relative			

## CABLE TROUBLESHOOTING

## TROUBLESHOOTING NCV CABLE CONNECTIONS

Nozzle control valve cable troubleshooting may require the system to be powered on and the NCV's disconnected. Disconnecting the NCV should result in Switch Out output to be 0 at the connection and will also result in Nozzle Offline errors that require NCV's to be recalibrated.

Disconnect the boom cable from the nozzle control valve. Hold the connector so that the retention clip is facing toward the 12 o'clock position.

#### FIGURE 2. Nozzle Control Valve Cable Connector



#### TABLE 3. Nozzle Control Valve Cable Connector Pins

Pin	Description	Pin	Description
1	Chassis Power (10.5 - 16.0 VDC)	6	Chassis Ground (0 VDC)
2	CAN High (2.0 - 2.7 VDC)	5	Switch In (8.0 -13.0 VDC coming from PCII on the first NCV's of the primary cable and 2.5 - 3.2 VDC from previous NCV on all others.)
3	Switch Out (2.5 - 3.2 VDC if NCV connected)	4	CAN Low (2.0 - 2.7 VDC)

## TROUBLESHOOTING 19-PIN BOOM CABLE CONNECTIONS

Boom connection cables alternate NCV power and ground circuits within the cable for banks of NCV's. Adjacent NCV's may not necessarily not be on the same HC power and ground circuit. Look at the end of the plug to locate the pin numbers.

#### TABLE 4. Boom Cable Connection Pins.

Pin	Description	Pin	Description
1	Black CAN GND	11	
2		12	Red HC PWR 2 (10.5 - 16.0 VDC)
3		13	
4	Green CAN LO (2.0 - 2.7 VDC)	14	Black HC GND 2
5	Red CAN PWR (12.0 - 14.0 VDC)	15	
6	Yellow CAN HI (2.0 - 2.7 VDC)	16	Red HC PWR 3 (10.5 -16.0 VDC)
7		17	Green FENCEROW SIG (10.5 - 16.0 VDC)
8	Red HC PWR 1 (10.5 - 16.0 VDC)	18	Black HC GND 3
9		19	Gray SW IN/ENABLE (8.0 - 13.0 VDC or 2.5 - 3.2 VDC)
10	Black HC GND 1		

### TROUBLESHOOTING TERMINATOR CONNECTIONS

Terminator connection referenced from cable side.

#### **TABLE 5.** Terminator Connection Pins

Pin	Description	Pin	Description
Α		D	Black CAN GND
В	Red CAN PWR (12.0 - 14.0 VDC)	E	Yellow CAN HI (2.0 - 2.7 VDC)
С		F	Green CAN LO (2.0 - 2.7 VDC)

#### TROUBLESHOOTING FLOW METER CABLES

Disconnect the extension cable from the flow meter. Hold the extension cable so that the keyway is facing toward the 12 o'clock position.





TABLE 6. Flow Meter with Deutsch DT Connector

Pin	Function
А	+ VDC
В	0 VDC
С	Signal Out

TABLE 7. Flow Meter with Deutsch DTM Connector

Pin	Function	
1	Signal	
2	Ground	
3	5 VDC	

#### TEST THE FLOW METER CABLE



- 1. Open the UT Menu and select the Intellispray<sup>™</sup> Menu button.
- 2. From the home screen, select the Tools Menu softkey along the right side of the display.
- 3. Select the System Settings tab along the top of the display and select the Product Control Settings button.
- 4. Enter a value of one for the Meter Cal value.
- 5. Select the Home softkey along the right side of the display and then select the Tally Registers softkey.
- 6. Monitor the Total Volume value while testing the cable.
- 7. Toggle at least one section switch and the master switch to the on position.
- 8. Use a small jumper wire (e.g. paper clip) to short the ground and signal sockets with a "short-no short" motion. Each time the short is made, the total volume value should change by increments of one or more.

- 9. If the total volume does not increase, disconnect this section of flow meter extension cable and repeat this test at the next connector closest to Product Controller II ECU. Replace defective cable as required.
- 10. If all cables test good, replace the flow meter.
- 11. After testing is complete, re-enter correct meter cal value and units.

## DIAGNOSTIC TROUBLE CODE (DTC) LIST

The following trouble codes may be displayed by the Intellispray<sup>™</sup> nozzle control system and should help the operator to identify and correct issues with system during field operations:.

Code ID		Description	Recommended Actions
10	.13	UT display is not on-line	<ol> <li>If this error occurs frequently, check the ISOBUS connections and review the UT display troubleshooting procedures.</li> <li>Connect the Raven Service Tool to the ISOBUS and verify communication</li> </ol>
158	.1	Logic SW power error	<ol> <li>Verify logic voltage is at or above 4.8v to Product Controller II ECU.</li> </ol>
168	.1	Battery voltage error	1. Verify HC voltage to Product Controller II ECU is above 9v.
	.13	System calibration required	<ol> <li>Complete the calibration wizard to configure all required Intellispray<sup>™</sup> system settings. Refer to Chapter 3, System Calibration for additional assistance with the calibration wizard.</li> </ol>
630	.31	Nozzle Calibration Error	<ol> <li>Complete the calibration wizard to configure all required Intellispray<sup>™</sup> system settings. Refer to Chapter 3, System Calibration for additional assistance with the calibration wizard.</li> </ol>
			<ol> <li>Cycle system power.</li> <li>Reset defaults.</li> </ol>
1563	.2	Nozzle control valves incompatible with product controller/Intellispray™ Product Controller II ECU	<ol> <li>Check for Product Controller II ECU software updates.</li> <li>Check for nozzle control valve software updates.</li> <li>Cycle system power.</li> <li>Reset defaults.</li> </ol>
	.17	NCV programming out of date	<ol> <li>Check for nozzle control valve software version differences. Update the nozzle control valves to a consistent software version. Refer to the Raven Service Tool Operation manual for assistance with the nozzle update procedure.</li> </ol>
	.31	Inconsistent nozzle control valve software version	<ol> <li>Check for nozzle control valve software version differences. Update the nozzle control valves to a consistent software version. Refer to the Raven Service Tool Operation manual for assistance with the nozzle update procedure.</li> </ol>

Code ID		Description		Recommended Actions
	.0	Maximum pressure exceeded	1.	Relieve pressure from system. Check the boom pressure transducer calibration settings.
			1.	Activate product pump.
	.1	System pressure not detectable.	2.	Check for system leaks.
			3.	Increase pump output to maintain a boom pressure above 6 PSI [13.8 kPa].
	.4	Pressure transducer not detected	1.	Check the pressure transducer connection.
			2.	Check the transducer cabling for damage and replace the cable if necessary.
	.13	Pressure transducer not calibrated	1.	Refer to the Tools Menu Settings Definitions section on page 20 for assistance with the pressure transducer calibration.
		Monitored system pressure higher than maximum pressure set-point	1.	Reduce the equipment speed.
	.15		2.	Refer to the System Settings Tab - Pressure section on page 31 for assistance with adjusting the maximum pressure set-point.
3132	.16	Monitored system pressure higher than the target pressure deadband	1.	Reduce the equipment speed.
			2.	Refer to the Pressure 1 and 2 Presets section on page 28 for assistance with setting or adjusting the target pressure.
			3.	Refer to the System Settings Tab - Pressure section on page 31 for assistance with setting or adjusting the off pressure percent.
	.17	Monitored system pressure lower than minimum pressure set-point	1.	Increase the equipment speed.
			2.	Refer to the System Settings Tab - Pressure section on page 31 for assistance with adjusting the minimum pressure set-point.
			1.	Increase the equipment speed.
	.18	Monitored system pressure lower than the target pressure deadband	2.	Refer to the Pressure 1 and 2 Presets section on page 28 for assistance with setting or adjusting the target pressure.
			3.	Refer to the Pressure 1 and 2 Presets section on page 28 for assistance with setting or adjusting the off pressure percent.
4305	.2	Equipment speed is below operational range	1.	Increase vehicle speed.

Code ID		Description	Recommended Actions
5200	.2	Nozzle indexing error	<ol> <li>Check that all nozzle control valves are connected to the boom harness.</li> <li>Verify nozzle counts on left and right booms.</li> <li>Check nozzle control valve diagnostics or status LEDs to identify valve is causing error.</li> <li>Restart the calibration wizard and complete the nozzle indexing to properly set the nozzle control valve locations across the implement.</li> <li>Check the terminator cables for bare or worn wires.</li> <li>Check the CAN voltages on the boom cables.</li> <li>Reload the object pool and disconnect power to the machine.</li> </ol>
	.3	Nozzle offline	<ol> <li>Cycle system power.</li> <li>Verify the correct total number of nozzles are detected and their information is present in the diagnostics information tab.</li> <li>Check LED lights on the NCV's Intellispray<sup>™</sup> Nozzle Control Valve Status section on page 53.</li> <li>Check the NCV's, connections, relays, cables, and fuses for damage.</li> <li>Recalibrate the NCV's.</li> </ol>
	.16	Too many nozzles detected	<ol> <li>Restart the calibration wizard and verify the number of nozzle control valves connected to the Intellispray<sup>™</sup> nozzle control system.</li> <li>Cycle system power.</li> <li>Reset defaults.</li> </ol>
520592	.5	NB HS current low single	<ol> <li>Reduce operating speed.</li> <li>Verify the NCV voltage is above 10.5v.</li> <li>Check the system cabling for damage.</li> <li>Check the NCV duty cycle for proper operation.</li> <li>Contact a local New Holland dealer if the issue is not resolved.</li> </ol>
	.6	NB HS current high single	<ol> <li>Reduce operating speed.</li> <li>Verify the NCV voltage is above 10.5v.</li> <li>Check the system cabling for damage.</li> <li>Check the NCV duty cycle for proper operation.</li> <li>Contact a local New Holland dealer if the issue is not resolved.</li> </ol>

Code ID		Description	Recommended Actions
			1. Reduce operating speed.
			2. Verify the NCV voltage is above 10.5v.
			3. Check the system cabling for damage.
	.5	NB HS current low multiple	4. Check the NCV duty cycle for proper
			operation.
			5. Contact a local New Holland dealer if the
520593			issue is not resolved.
520555			1. Reduce operating speed.
			2. Verify the NCV voltage is above 10.5v.
			3. Check the system cabling for damage.
	.6	NB HS current high multiple	4. Check the NCV duty cycle for proper
			operation.
			5. Contact a local New Holland dealer if the
			issue is not resolved.
			1. Select the appropriate tip type. Refer to the
		Nozzle calibration tip mismatch/ error	for additional assistance
	.2		2 Restart the calibration wizard to reset the tip
523008			type setting for the nozzle control system.
			3. Cycle system power and reset defaults.
	.31	No NCV tip size selected	1. Enter a NCV tip size into the calibration
			summary tab.
	.2	Nozzle calibration spacing mismatch/error	1. Restart the calibration wizard to re-enter the
523009			tip spacing measurement.
525005			2. Cycle system power.
			3. Reset defaults.
	.12	Nozzle memory error (single)	1. Restart the calibration wizard.
			2. Cycle system power.
			3. Reset defaults.
			4. Contact a local New Holland dealer for
523088			additional assistance.
	.31	Nozzle memory warning (single)	1. Restart the calibration wizard.
			2. Cycle system power.
			3. Reset defaults.
			4. Contact a local New Holland dealer for
			1 Restart the calibration wizard
			2 Cycle system power and reset defaults
	.12	Nozzle memory error (single	3 Contact a local New Holland dealer for
			additional assistance.
523089	.31		1. Restart the calibration wizard.
		Nozzle memory warning (multiple)	2. Cycle system power.
			3. Reset defaults.
			4. Contact a local New Holland dealer for
			additional assistance.

Code ID		Description	Recommended Actions
523090	.1	Nozzle calibration error (single)	<ol> <li>Restart the calibration wizard to recalibrate the nozzle control system.</li> <li>Cycle system power.</li> <li>Reset defaults.</li> </ol>
523091	.1	Nozzle calibration error (multiple)	<ol> <li>Restart the calibration wizard to recalibrate the nozzle control system.</li> <li>Cycle system power.</li> <li>Reset defaults.</li> </ol>
523092	.31	No tip information entered for nozzle control valve (single)	<ol> <li>Select the appropriate tip type. Refer to Injection Pump Efficiency section on page 43 for additional assistance.</li> <li>Restart the calibration wizard to reset the tip type setting for the nozzle control system</li> </ol>
523093	.31	No tip information entered for nozzle control valves (multiple)	<ol> <li>Restart the calibration wizard to configure tip information for the Intellispray<sup>™</sup> nozzle control valves.</li> </ol>
523126	.13	Unable to detect Intellispray™ Product Controller II ECU orientation	<ol> <li>Check the Product Controller II ECU mounting position and verify the Product Controller II ECU is securely mounted.</li> </ol>
			2. Recalibrate the Product Controller II ECU gyro.
523136	.16	Monitored flow rate is higher than the target rate deadband	<ol> <li>Reduce the equipment speed.</li> <li>Review "Avoiding Skips with Intellispray™ Nozzle Control System" section on page 69.</li> <li>Refer to the Upper Home Screen section on page 40 for assistance with setting or adjusting the target rate.</li> </ol>
			<ol> <li>Refer to the System Settings Tab - Alarm section on page 27 for assistance with setting or adjusting the off rate percent.</li> </ol>
	.18	Monitored flow rate is lower than the target rate deadband	<ol> <li>Increase the equipment speed.</li> <li>Refer to the Upper Home Screen section on page 40 for assistance with setting or adjusting the target rate.</li> <li>Refer to the System Settings Tab - Alarm section on page 27 for assistance with setting or adjusting the off rate percent.</li> </ol>
523137	.18	Minimum flow not met	<ol> <li>Activate product pump.</li> <li>Review "Avoiding Skips with Intellispray™ Nozzle Control System" section on page 69.</li> <li>Increase pump output to maintain the minimum recommended flow rate for each nozzle control valve.</li> </ol>

Code ID		Description		Recommended Actions				
	.13	Sparge pressure transducer not calibrated	1.	Refer to the "Tools Menu Settings Definitions" on page 20 for assistance with pressure transducer calibration.				
	.14	New injection pump detected	1.	A new injection pump was detected.				
523192			1.	Verify the LED's on the injection pump are on.				
	.15	Injection pump lost communication	2.	Check the CAN connections of the injection device.				
			3.	Connect the Raven Service Tool to the ISOBUS and verify communication.				
			1.	Check the plumbing system for leaks.				
			2.	Check the pressure transducer calibration.				
	.16	High system efficiency	3.	Check the Flowmeter Calibration value.				
			4.	Verify the fencerow outputs are not active.				
523193			5.	Check the NCV's for debris or seal for wear.				
			1.	Check the pressure transducer calibration.				
	18	Low system efficiency	2.	Check the Flowmeter Calibration value.				
	.10	Low system enciency	3.	Check the NCV's for debris or seal deformation.				
523520	.31	Invalid flowmeter calibration	1.	Enter a valid flowmeter calibration value.				
523906	.17	Equipment speed below the speed range (single nozzle)	1.	Increase equipment speed to the range displayed on the Intellispray <sup>™</sup> home screen. Refer to the Upper Home Screen section on page 40 and Lower Home Screen section on page 43 for assistance with the information provided on the home screen.				
523907	.17	Equipment speed below the speed range (multiple nozzles)	1.	Increase equipment speed to the range displayed on the Intellispray <sup>™</sup> home screen. Refer to the Upper Home Screen section on page 40 and Lower Home Screen section on page 43 for assistance with the information provided on the home screen.				
523908	.15	Equipment speed above the speed range (single nozzle)	1.	Reduce equipment speed to the range displayed on the Intellispray <sup>™</sup> home screen. Refer to the Upper Home Screen section on page 40 and Lower Home Screen section on page 43 for assistance with the information provided on the home screen.				
523909	.15	Equipment speed above the speed range (multiple nozzles)	1.	Reduce equipment speed to the range displayed on the Intellispray <sup>™</sup> home screen. Refer to the Upper Home Screen section on page 40 and Lower Home Screen section on page 43 for assistance with the information provided on the home screen.				
523910	.31	Nozzle power/temperature error (single)	1.	Check for clogs in valve or associated plumbing that may be preventing liquid flow through the valve.				
523911	.31	Nozzle power/temperature error (multiple)	1.	Check for restrictions in valves or associated plumbing that may be preventing liquid flow through the valve.				
Code I	D	Description	Recommended Actions					
--------	-----	----------------------------------	--	--	--	--	--	--
			<ol> <li>Reduce operating speed.</li> <li>Verify the NCV voltage is above 10.5v.</li> </ol>					
			3. Check the system cabling for damage.					
523912	.31	NB voltage low single	4. Check the NCV duty cycle for proper operation.					
			5. Contact a local New Holland dealer if the issue is not resolved.					
			1. Reduce operating speed.					
			2. Verify the NCV voltage is above 10.5v.					
			3. Check the system cabling for damage.					
523913	.31	NB voltage low multi	<ol> <li>Check the NCV duty cycle for proper operation.</li> </ol>					
			5. Contact a local New Holland dealer if the issue is not resolved.					
			1. Verify the NCV voltage is above 10.5v.					
523914	31	Nozzle Product Controller II ECU	2. Check the system cabling for damage.					
	.51	no master single	3. Contact a local New Holland dealer if the issue is not resolved.					
			1. Verify the NCV voltage is above 10.5v.					
523915	31	Nozzle Product Controller II ECU	2. Check the system cabling for damage.					
323313	.91	no master multiple	<ol> <li>Contact a local New Holland dealer if the issue is not resolved.</li> </ol>					
523916	.31	Single poppet stuck	<ol> <li>Inspect the NCV's for obstruction or restrictions. Clean if necessary.</li> </ol>					
			2. Verify the strainers are 80 mesh.					
523917	.31	Multiple stuck poppets	<ol> <li>Inspect the NCV's for obstruction or restrictions. Clean if necessary.</li> </ol>					
			1. Verify the strainers are 80 mesh.					
E24080	2	Lost communication with switch	<ol> <li>Check Raven ISOBUS switch box connections if installed, power LED located on front of the switch box should be on.</li> </ol>					
524080	.2	box	<ol> <li>Connect the Raven Service Tool to the ISOBUS and verify communication.</li> </ol>					
			3. Cycle power to system.					
524081	.13	Switchbox not calibrated	<ol> <li>A switchbox was added after calibration was complete. Re-calibrate the system with the switchbox connected.</li> </ol>					

Code	ID	Description	Recommended Actions					
			1. Reset defaults.					
		Incompatible hardware	2. Recalibrate the system.					
			3. See a ealer for assistance.					
			1. Reset defaults.					
		NB unknown error single	2. Recalibrate the system.					
			3. See a dealer for assistance.					
			1. Reset defaults.					
	1	NB unknown error multi	2. Recalibrate the system.					
			3. See a dealer for assistance.					
	.1	12C init	1. Reset defaults and recalibrate system.					
			2. See a dealer for assistance.					
4294967295		Gyro sensor not initialized	<ol> <li>Check the Product Controller II ECU mounting position and verify the Product Controller II ECU is securely mounted.</li> </ol>					
			1. Recalibrate the Product Controller II ECU gyro.					
		Accelerometer not initialized	<ol> <li>Check the Product Controller II ECU mounting position and verify the Product Controller II ECU is securely mounted.</li> </ol>					
			1. Recalibrate the Product Controller II ECU gyro.					
		Chemical tank is filling	1. The remote chemical tank fill switch is active.					
	.31	Section control is not unlocked	<ol> <li>Verify section control is unlocked in the UT or Task Controller. See UT or task controller dealer for assistance.</li> </ol>					
		Diagnostic application in control	1. Verify a wireless device is in control of the system.					

# GENERAL TROUBLESHOOTING

Problem	Action
Adjacent nozzle control valves pulsing at	Check cabling connections.
same time.	• Check nozzle diagnostics and DTC list for nozzle control valve errors.
	<ul> <li>Restart the calibration wizard to reindex the nozzle control valves across the implement width.</li> </ul>
	• See a dealer for assistance.
Rate reads "0."	• Verify SPEED is registering accurately. If SPEED is zero, refer to the UT display troubleshooting procedure.
	Verify TOTAL VOLUME is registering flow.
	• Confirm the boom section status shows on the display changes when section switches are activated in manual operation.

Problem	Action
Pressure or rate inaccurate or unstable.	• Verify that all calibration numbers and settings keyed into the console are correct. Verify SPEED is registering accurately. If SPEED is inaccurate, refer to the UT display troubleshooting procedure.
	<ul> <li>Verify the pressure transducer is selected and calibrated correctly.</li> </ul>
	• Verify Flow Meter calibration value and target rate is within overall flow range.
	<ul> <li>In MAN (manual) operation, verify that Pressure and Rate display holds constant.</li> </ul>
	• Confirm that boom section status shown on the display is not changing.
	• Perform a self-test with boom master switches on to verify the area/hour is steady while sitting still.
	<ul> <li>In MAN (manual) operation, check low end and high end pressure and flow range.</li> </ul>
	• In the Pressure Control Settings menu, decrease the Response Rate if pressure and rate oscillate greatly in AUTO mode. Increase the pressure response rate if control is unresponsive.
	• In the Product Control Settings menu, decrease response sensitivity if system pressure and rate oscillate slightly in AUTO mode. Increase if the system is unresponsive. Avoid Pressure Response Rate and Product Response Sensitivity both above 70.
Cannot adjust rate or pressure in automatic or manual operation.	• Verify the pump switch is turned on in the UT or machine console.
	<ul> <li>Verify the pump and NCV PWM values are increasing or decreasing in the diagnostic screen.</li> </ul>
	<ul> <li>Check cabling to control valve for breaks.</li> </ul>
	<ul> <li>Check connections in cabling for cleanliness.</li> </ul>
	• Verify that there is voltage at the valve connector by toggling master switch on and setting the system to Manual. Manually change pump PWM and verify voltage changes at the valve.
	• If voltage to the valve is changing smoothly when actuating in Manual mode, but the control valve or pump are not adjusting pressure, inspect or replace the control valve or pump.
Sprayer pressure is correct but RATE is low.	<ul> <li>Verify that nozzle strainer screens or check valves are not plugged.</li> </ul>
	• Verify that pressure at each boom is the same.
	• Verify all nozzles are of proper and same orifice size.
	• Verify correct flowmeter and pressure transducer calibration values.

Problem	Action
Total volume does not register or registers flow inaccurately.	• Check flow meter/encoder cable for breaks and shorts. See the Cable Troubleshooting section on page 54.
	<ul> <li>Check the internal components of the flow meter; clean and adjust. Appendix C, Maintenance Schedule and Replacement Parts for flow meter cleaning and adjustments.</li> </ul>
	Replace flow meter transducer/encoder.
	• Verify that arrow on flow meter is pointing in direction of flow.
	• Verify the flowmeter calibration value and units and adjust as necessary. Refer to the Flowmeter Cal section on page 22 for additional flowmeter calibration information.
Boom valve(s) will not operate.	Check cable for wires with breaks.
	• Verify the switches and boom valves are mapped correctly.
	Check connectors for cleanliness.
	Check BOOM switch and MASTER switch for operation.
	Replace boom valves.
Pressure inaccurate or unstable.	• Verify the correct pressure for the transducer is selected.
	<ul> <li>In Pressure Settings, lower the Response Rate to stabilize the system.</li> </ul>
	• Verify the pressure on UT matches separate external mechanical gauge.
Individual nozzle will not communicate	Verify power to the nozzle.
with Raven Service Tool Action	• Verify the NCV cable connection voltages fall within the desired range.
	Cycle power to the system.
	Recalibrate the system.
	Replace the NCV.
Cannot detect BLE (Blue-tooth low energy)	• Verify Bluetooth functionality is turned on for mobile device.
device for diagnostics	<ul> <li>Verify another mobile device isn't already connected to the Product Controller II ECU.</li> </ul>
	<ul> <li>Verify that the mobile device is BLE compatible running ISO version 8.1 or newer or Android Version 5 or newer.</li> </ul>
	• Verify the mobile device is within line of sight to the Product Controller II ECU.
Cannot connect to BLE (Blue-tooth low energy) device for diagnostics	• Verify mobile devices is within line of sight to the Product Controller II ECU.
	• Verify device Wireless ID on Product Controller II ECU System Information screen.
	<ul> <li>Verify a Device Passcode entered into mobile device matches passcode shown on System Alert.</li> </ul>

Problem	Action
Intermittent connection to BLE (Blue-tooth low energy) devices	• Verify mobile device is within line of sight to Product Controller II ECU.
	• Verify the mobile device Diagnostic app is open.
Cannot control with mobile device	• Verify mobile device is connected to Product Controller II ECU.
	• Verify the Enable Wireless Control checkbox is selected in User Settings screen on Product Controller II ECU.
	• Verify system speed in "0" on the main Product Controller II ECU screen.
	• Verify all boom section switches and master switch are toggled "ON" on the machine control panel or joystick.

# APPENDIXAVOIDING SKIPS WITH<br/>INTELLISPRAY™ NOZZLE<br/>CONTROL SYSTEM

# OVERVIEW

The Intellispray<sup>™</sup> nozzle control system is designed to pulse each spray tip using an alternating pattern across the implement width. This alternating nozzle spray pattern relies upon an overlapping spray tip pattern and droplet dispersion to achieve complete and even coverage during field applications.

#### RECOMMENDATIONS FOR INTELLISPRAY™ NOZZLE CONTROL OPERATION

Maintain the following application system conditions will help to ensure consistent, even coverage during field applications using the Intellispray<sup>™</sup> nozzle control system:

- 1. Use the appropriate tip size for the desired droplet size, application speeds, target rates, and system pressures. Refer to the tables in the Tip Selection and Application Speed Guide section on page 73.
- 2. Use wide-angle spray tips and appropriate spray tip height to achieve approximately 150% pattern overlap.
  - a. When using 80° spray tips:
    - 20" spacing have a minimum spray tip height of 36" (91.4 cm)
    - 15" spacing have a minimum spray tip height of 27" (68.6 cm)
    - 10" spacing have a minimum spray tip height of 18" (45.7 cm)
  - b. When using 110° spray tips:
    - 20" spacing have a minimum spray tip height of 21" (53.3 cm)
    - 15" spacing have a minimum spray tip height of 16" (40.6 cm)
    - 10" spacing have a minimum spray tip height of 10" (25.4 cm)
- 3. Maintain a system pressure sufficient to fully develop the intended tip spray pattern.
- 4. Avoid nozzle control valve duty cycles below 25%.
  - a. Stay within the displayed speed range for a selected tip size, application rate, and pressure.
  - b. Avoid application speeds in the bottom 1/3 of the recommended speed range.
  - c. Avoid target flow rates in the bottom 1/3 of the recommended application rate range for each spray tip.
  - d. When turn compensation is active, make gradual turns to avoid operating the NCV's at their limits.
- 5. Target application speeds, tip sizes, and operating pressures so the NCV's operate at approximately 70% +/- 10% duty cycle on average for the desired spray droplet size.

#### FOR EXAMPLE:

Consistent and even field coverage should result under the following application conditions:

- applicator with 20 inch [50.8 cm] nozzle spacing
- 110° fan spray tips at 50 PSI [344.7 kPa]
- application speed of 15 mph [24.1 km/h]
- spray tip height of 21 inches [53.3 cm]





**NOTE**: In Automatic control mode, the Intellispray<sup>™</sup> nozzle control system will adjust the system to maintain the optimal application coverage within the operational ranges provided in the Tip Selection and Application Speed Guide section on page 73.

#### CAUSES OF SKIPS USING INTELLISPRAY™ NOZZLE CONTROL

Operating the Intellispray<sup>™</sup> nozzle control system at or outside of the recommended operational ranges may result in under-application or banding.

#### FOR EXAMPLE:

Under-application or horizontal banding may be observed if the operator from the previous example were to toggle the application mode from Automatic to Manual and then increase the application speed from 15 mph [24.1 km/h] to 22 mph [35.4 km/h] without manually increasing the nozzle control valve duty cycle.

#### FIGURE 2. Conditions Resulting in Under-Application and Horizontal Banding



#### FOR EXAMPLE:

Under-application with diagonal banding may be observed if the following modification to the initial example are made:

- Using 80° fan spray tips at a height of 21 inches [53.3 cm].
- Boom pressure is too low resulting in the nozzle tip not being able to achieve full spray pattern.
- NOTE: Refer to Recommendations for Intellispray<sup>™</sup> Nozzle Control Operation section on page 69 and recall the recommended spray height for 80° spray tips. Refer to Tip Selection and Application Speed Guide section on page 73 for boom and spray tip pressure recommendations.

#### FIGURE 3. Conditions Resulting in Under Application and Diagonal Banding



# TIP SELECTION AND APPLICATION SPEED GUIDE

## DRIFT CONTROL AND DROPLET SIZING

The table below shows the drift control specifications for different nozzle manufacturers. Use this information when selecting the appropriate nozzles for your application.

To properly size spray tip and type, determine the typical spray speed, target pressure for desired for droplet size, and target rate for application.

FOR EXAMPLE: If the desired target rate is 10 GPA at 15 mph with a medium desired droplet size:

- For conventional spraying, the tip chart recommends using an 05 spray tip at 40 PSI.
- For pulsing nozzles with a target of 70% +/- 10% duty cycle, use a 06 or 08 tip. At 40 PSI either tip would create the desired droplet size.

TABLE 1. Nozzle Drift Control by Manufacturer.

Tip Size	Boom Pressure (PSI)	(v	Wil /ww.wi	ger ilger.ne	et)	(ww	TeeJet (www.teejet.co m) Hypro (www.hypropumps.cor			Hypro-         Hypro-       Second         Hypro-       Second       Second<		ım)	
Orifice Size	PSI	ER	SR	MR	DR	XR/XRC	TT/2XTT	TTJ60	HF	GRD	ĽD	VP	TR
	Gauge	110	110	110	110	110	110	110	110	110	110	110	120
	20	М	-	С	-	М	VC	VC	-	М	М	F	М
	30	М	С	VC	XC	F	С	С	-	М	М	F	F
03	40	F	С	VC	XC	F	С	С	-	М	М	F	F
	50	F	С	С	VC	F	М	С	-	М	М	F	F
	60	F	С	С	VC	F	М	С	-	М	М	F	F
	20	С	-	-	-	М	VC	VC	-	С	С	М	М
	30	С	С	VC	XC	М	С	С	-	С	С	М	М
04	40	М	С	VC	XC	М	С	С	-	С	М	F	F
	50	М	С	С	XC	F	М	С	-	М	М	F	F
	60	М	С	С	VC	F	М	С	-	М	М	F	F
	20	С	-	-	-	М	VC	VC	-	С	С	М	С
	30	С	VC	XC	XC	М	VC	С	-	С	С	М	М
05	40	М	С	XC	XC	М	С	С	-	С	М	F	F
	50	М	С	VC	XC	F	С	С	-	М	М	F	F
	60	М	С	VC	XC	F	М	С	-	С	С	F	М
	20	С	-	-	-	М	VC	XC	-	VC	VC	М	С
	30	С	VC	XC	XC	М	VC	VC	-	С	С	М	С
06	40	С	VC	XC	XC	М	VC	С	-	С	С	М	М
	50	С	С	XC	XC	М	С	С	-	С	С	F	М
	60	С	С	VC	XC	F	С	С	-	С	С	F	М

Tip Size	Boom Pressure (PSI)	(v	Wi /ww.w	lger ilger.ne	et)	(ww	TeeJet w.teeje m)	t et.co	(w	Hypro (www.hypropumps.com)				
Orifice Size	PSI	FR	SR	MR	DR	XR/XRC	TT/2XTT	TTJ60	뷰	GRD	Ð	VP	TR	
	Gauge	110	110	110	110	110	110	110	110	110	110	110	120	
	20	С	-	-	-	С	VC	-	UC	VC	VC	С	С	
	30	С	XC	XC	XC	С	VC	-	UC	С	С	М	С	
08	40	С	VC	XC	XC	М	С	-	UC	С	С	М	М	
	50	С	VC	XC	XC	М	С	-	UC	С	С	М	М	
	60	С	С	VC	XC	М	С	-	XC	С	С	М	М	
	30	С	XC	XC	UC	С	-	-	UC	-	-	С	VC	
10	40	С	VC	XC	UC	М	-	-	UC	-	-	С	С	
10	50	С	VC	XC	XC	М	-	-	UC	-	-	М	М	
	60	С	VC	VC	XC	М	-	-	XC	-	-	М	М	
	40	VC	VC	XC	XC	-	-	-	-	-	-	-	-	
12.5	50	С	VC	XC	XC	-	-	-	-	-	-	-	-	
	60	С	VC	XC	XC	-	-	-	-	-	-	-	-	
	40	VC	XC	XC	XC	С	-	-	UC	-	-	VC	VC	
15	50	С	XC	XC	XC	С	-	-	UC	-	-	С	С	
	60	С	XC	XC	XC	С	-	-	XC	-	-	М	М	

#### DRIFT CONTROL TABLE KEY

Refer to this key while using the drift control table:

#### TABLE 2. Number Key

Drift Category	Symbol and Color
Very Fine	VF
Fine	F
Medium	М
Coarse	С
Very Coarse	VC
Extremely Coarse	XC
Ultra Course	UC

#### APPLICATION SPEED GUIDE

The ranges for speed and flow rate provided in this section are for reference purposes only. Observed ranges may vary depending upon application system plumbing and hardware. It is recommended to avoid operating at, or close to, the upper and lower limits of the speed or flow rate ranges shown for each spray tip. The values in the table below are based on 20" nozzle spacing.

#### STANDARD STYLE NOZZLE BODIES

TABLE 3. Sp	eed Table for Standard	d (Straight) Style N	lozzle Bodies (Imperial)
-------------	------------------------	----------------------	--------------------------

qiT	Boom	Speed Range (MPH)															
Size	Pressure (PSI)	3	GPA	5	GP	PA	8	GF	PA	10	) G	PA	15	G	PA	20	GPA
	20.0	5.4	10.6	3.2		6.3	2.0		4.0	1.6		3.2	1.1		2.1	0.8	1.6
	30.0	6.0	12.9	3.6		7.8	2.2		4.8	1.8		3.9	1.2		2.6	0.9	1.9
015	40.0	6.5	14.9	3.9		9.0	2.4		5.6	1.9		4.5	1.3		3.0	1.0	2.2
	50.0	6.9	16.7	4.1		10.0	2.6		6.3	2.1		5.0	1.4		3.3	1.0	2.5
	60.0	733	18.3	4.4		11.0	2.7		6.9	2.2		5.5	1.5		3.7	1.1	2.7
	20.0	6.2	13.7	3.7		8.2	2.3		5.1	1.8		4.1	1.2		2.7	0.9	2.1
	30.0	6.9	16.8	4.2		10.1	2.6		6.3	2.1		5.0	1.4		3.4	1.0	2.5
02	40.0	7.6	19.4	4.5		11.7	2.8		7.3	2.3		5.8	1.5		3.9	1.1	2.9
	50.0	8.2	21.7	4.9		13.0	3.1		8.1	2.4		6.5	1.6		4.3	1.2	3.3
	60.0	8.7	23.8	5.2		14.3	3.3		8.9	2.6		7.1	1.7		4.8	1.3	3.6
	20.0	7.1	17.4	4.2		10.4	2.7		6.5	2.1		5.2	1.4		3.5	1.1	2.6
	30.0	8.0	21.3	4.8		12.8	3.0		8.0	2.4		6.4	1.6		4.3	1.2	3.2
025	40.0	8.9	24.6	5.3		14.8	3.3		9.2	2.7		7.4	1.8		4.9	1.3	3.7
	50.0	9.6	27.5	5.8		16.5	3.6		10.3	2.9		8.2	1.9		5.5	1.4	4.1
	60.0	10.3	30.1	6.2		18.1	3.8		11.3	3.1		9.0	2.1		6.0	1.5	4.5
	20.0	7.9	20.6	4./		12.4	3.0		1.1	2.4		6.2	1.6		4.1	1.2	3.1
0.2	30.0	9.0	25.3	5.4		15.2	3.4		9.5	2.7		7.6	1.8		5.1	1.4	3.8
03	40.0	10.0	29.2	6.0		17.5	3.8		11.0	3.0		8.8	2.0		5.8	1.5	4.4
	50.0	10.9	32.6	635		19.6	4.1		12.2	3.3		9.8	2.2		6.5	1.6	4.9
	60.0		35.8	7.0		21.5	4.4		13.4	3.5		10.7	2.3		1.2	1./	5.4
	20.0	9.5 11.1	27.2	5.7		20.0	5.0		10.2	2.9		0.2	1.9		5.4 6.7	1.4	4.1
04	30.0	11.1	28.5	0.0	$\left  \right $	20.0	4.1		12.5	2.5 2.7		10.0	2.2		0.7	1.7	5.0
04	50.0	12.5	13.0	7.4 8.1	$\left  \right $	25.1	4.0 5.1		14.4	J.1 1 0		12.0	2.5		8.6	2.0	5.0
	60.0	1/ 5	43.0	0.1 8.7		29.0	5.1		17.7	4.0		1/ 1	2.7		0.0 Q /	2.0	71
	20.0	14.5	33.5	6.7		20.5	<u> </u>		12.6	4.4 2 2		10.1	2.5		6.7	17	5.0
	30.0	13.0	41.0	7.8		24.6	4.9		15.4	3.9		12.3	2.6		82	1.7	6.2
05	40.0	14.6	47.4	87	$\left  \right $	28.4	5 5		17.8	44		14.2	29		9.5	22	71
	50.0	16.0	53.0	9.6	$\left  \right $	31.8	6.0		19.9	4.8		15.9	3.2		10.6	2.4	7.1
	60.0	17.2	58.0	10.3		34.8	6.5		21.8	5.2		17.4	3.4		11.6	2.6	8.7
	20.0	12.6	39.5	7.6		23.7	4.7		14.8	3.8		11.9	2.5		7.9	1.9	5.9
	30.0	14.7	48.4	8.9		29.0	5.6		18.1	4.4		14.5	3.0		9.7	2.2	7.3
06	40.0	16.7	55.9	10.0		33.5	6.3		21.0	5.0		16.8	3.3		11.2	2.5	8.4
	50.0	18.3	62.5	11.0		37.5	6.9		23.4	5.5		18.7	3.7		12.5	2.8	9.4
	60.0	19.8	68.4	11.9		41.1	7.4		25.7	5.9		20.5	4.0		13.7	3.0	10.3
	20.0	15.4	50.6	9.2		30.4	5.8		19.0	4.6		15.2	3.1		10.1	2.3	7.6
	30.0	18.2	62.0	10.9		37.2	6.8		23.2	5.5		18.6	3.6		12.4	2.7	9.3
08	40.0	20.6	71.6	12.4		42.9	7.7		26.8	6.2		21.5	4.1		14.3	3.1	10.7
	50.0	22.7	80.0	13.6		48.0	8.5		30.0	6.8		24.0	4.5		16.0	3.4	12.0
	60.0	24.6	87.6	14.8		52.6	9.2		32.9	7.4		26.3	4.9		17.5	3.7	13.1
	30.0	21.2	73.7	12.7		44.2	7.9		27.7	6.3		22.1	4.2		14.7	3.2	11.1
10	40.0	24.0	85.1	14.4		51.1	9.0		31.9	7.2		25.5	4.8		17.0	3.6	12.8
10	50.0	26.5	95.2	15.9		57.1	9.9		35.7	8.0		28.6	5.3		19.0	4.0	14.3
	60.0	26.8	104.3	17.3		62.6	10.8		39.1	8.6		31.3	5.8		20.9	4.3	15.6

Tip	Boom	Speed Range (MPH)												
Size	Pressure (PSI)	3	GPA	5 GPA		8	GPA	10	) GPA	15	GPA	20 GPA		
	30.0	24.2	86.0	14.5	51.6	9.1	32.2	7.3	25.8	4.8	17.2	3.6	12.9	
12 5	40.0	27.5	99.3	16.5	59.6	10.3	37.2	8.3	29.8	5.5	19.9	4.1	14.9	
12.5	50.0	30.5	111.0	18.3	66.6	11.4	41.6	9.1	33.3	6.1	22.2	4.6	16.7	
	60.0	33.1	121.6	19.9	73.0	12.4	45.6	9.9	36.5	6.6	24.3	5.0	18.2	
	30.0	26.7	96.0	16.0	57.6	10.0	36.0	8.0	28.8	5.3	19.2	4.0	14.4	
15	40.0	30.4	110.9	18.3	66.5	11.4	41.6	9.1	33.3	3.1	22.2	4.6	16.6	
	50.0	33.7	124.0	20.2	74.4	12.6	46.5	10.1	37.2	6.7	24.8	5.1	18.6	
	60.0	36.7	135.8	22.0	81.5	13.8	50.9	11.0	40.7	7.3	27.2	5.5	20.4	
	30.0	30.3	110.4	18.2	66.2	11.4	41.4	9.1	33.1	6.1	22.1	4.5	16.6	
20	40.0	34.6	127.5	20.8	76.5	13.0	47.8	10.4	38.2	6.9	25.5	5.2	19.1	
20	50.0	38.4	142.5	23.0	85.5	14.4	53.4	11.5	42.8	7.7	28.5	5.8	21.4	
	60	41.8	156.1	25.1	93.7	15.7	58.5	12.5	46.8	8.4	31.2	6.3	23.4	

TABLE 4. Speed Table for Standard (Straight) Style Nozzle Bodies (Metric)

Tin Boom Speed Range (km/h)													
Size	Pressure (kPa)	30 I	_/ha	50 I	_/ha	75	L/ha	100	L/ha	150	L/ha	175	L/ha
	140	8.1	16.0	4.9	9.6	3.2	6.4	2.4	6.7	1.6	3.2	1.4	2.7
	200	8.9	19.1	5.3	11.5	3.6	7.7	2.7	5.7	1.8	3.8	1.5	3.3
015	275	9.7	22.4	5.8	13.5	3.9	9.0	2.9	6.7	1.9	4.5	1.7	3.8
	350	10.4	25.3	6.3	15.2	4.2	10.1	3.1	7.6	2.1	5.1	1.8	4.3
	400	10.9	27.0	6.5	16.2	4.3	10.8	3.3	8.1	2.2	5.4	1.9	4.6
	140	9.3	20.8	5.6	12.5	3.7	8.3	2.8	6.2	1.9	4.2	1.6	3.6
	200	10.3	24.9	6.2	14.9	4.1	10.0	3.1	7.5	2.1	5.0	1.8	4.3
02	275	11.4	29.2	6.8	17.5	4.6	11.7	3.4	8.8	2.3	5.8	2.0	5.0
	350	12.3	32.9	7.4	19.7	4.9	13.2	3.7	9.9	2.5	6.6	2.1	5.6
	400	12.9	35.2	7.7	21.1	5.2	14.1	3.9	10.6	2.6	7.0	2.2	6.0
	140	10.7	26.3	6.4	15.8	4.3	10.5	3.2	7.9	2.1	5.3	1.8	4.5
	200	12.0	31.5	7.2	18.9	4.8	12.6	3.6	9.4	2.4	6.3	2.1	5.4
025	275	13.3	36.	8.0	22.2	5.3	14.8	4.0	11.1	2.7	7.4	2.3	6.3
	250	14.5	41.7	8.7	25.0	5.8	16.7	4.4	12.5	2.9	8.3	2.5	7.1
	400	15.2	44.5	9.1	26.7	6.1	17.8	4.6	13.4	3.0	8.9	2.6	7.6
	140	11.9	31.3	7.1	18.8	4.8	12.5	3.6	9.4	2.4	6.3	2.0	5.4
	200	13.4	37.4	8.1	22.4	5.4	15.0	4.0	11.2	2.7	7.5	2.3	6.4
03	275	15.1	43.8	9.0	26.3	6.0	17.5	4.5	13.2	3.0	8.8	2.6	7.5
	350	16.5	49.5	9.9	29.7	6.6	19.8	4.0	14.8	3.3	9.9	2.8	8.5
	400	17.3	52.9	10.4	31.7	6.9	21.2	5.2	15.9	3.5	10.6	3.0	9.1
	140	14.4	41.2	8.6	24.7	5.8	16.5	4.3	12.4	2.9	8.2	2.5	7.1
	200	16.4	49.3	9.8	29.6	6.6	19.7	4.9	14.8	3.3	9.9	2.8	8.4
04	275	18.5	57.8	11.1	34.7	7.4	23.1	5.6	17.3	3.7	11.6	3.2	9.9
	350	20.4	65.2	12.2	39.1	8.2	26.1	6.1	19.6	4.1	13.0	3.5	11.2
	400	21.5	69.7	12.9	41.8	8.6	27.9	6.5	20.9	4.3	13.	3.7	11.9
	140	16.8	50.8	10.1	30.5	6.7	20.3	5.0	15.2	3.4	10.2	2.	8.7
	200	19.3	60.7	11.6	36.4	7.7	24.3	5.8	18.2	3.9	12.1	3.3	10.4
05	275	21.9	71.1	13.1	42.7	8.8	28.5	6.6	21.3	4.4	14.2	3.8	12.2
	350	24.2	80.3	14.5	48.2	9.7	32.1	7.2	24.1	4.8	16.1	4.1	13.8
	400	25.5	85.8	15.3	51.5	10.2	34.3	7.7	25.7	5.1	17.2	4.4	14.7

Tin Boom Speed Range (km/h)													
Size	Pressure (kPa)	30 I	_/ha	50	L/ha	75	L/ha	100	L/ha	150	L/ha	175	L/ha
	140	19.1	59.9	11.4	35.9	7.6	24.0	5.7	18.0	3.8	12.0	3.3	10.3
	200	22.0	71.5	13.2	42.9	8.8	28.6	6.6	21.5	4.4	14.3	3.8	12.3
06	275	25.1	83.9	15.0	50.3	10.0	33.6	7.5	25.2	5.0	16.8	4.3	14.4
	350	27.8	94.6	16.7	56.8	11.1	37.9	8.3	28.4	5.6	18.9	4.8	16.2
	400	29.4	101.2	17.6	60.7	11.8	40.5	8.8	30.4	5.9	20.2	5.0	17.4
	140	23.3	76.7	14.0	46.0	9.3	30.7	7.0	23.0	4.7	15.3	4.0	13.1
	200	27.0	91.6	16.2	55.0	10.8	36.7	8.1	27.5	5.4	18.3	4.6	15.7
08	275	31.0	107.4	18.6	64.5	12.4	43.0	9.3	32.2	6.2	21.5	5.3	18.4
	350	34.4	121.2	20.6	72.7	13.8	48.5	10.3	36.4	6.9	24.2	5.9	20.8
	400	36.5	129.6	21.9	77.7	14.6	51.9	10.9	38.9	7.3	25.9	6.3	22.2
	200	31.3	109.0	18.8	65.4	12.5	43.6	9.4	32.7	6.3	21.8	5.4	18.7
10	275	36.1	127.8	21.6	76.7	14.4	51.2	10.8	38.4	7.2	25.6	6.2	21.9
10	350	40.1	144.2	24.1	86.5	16.1	57.7	12.0	43.3	8.0	28.8	5.9	24.7
	400	42.6	154.2	25.6	92.5	17.1	61.7	12.8	46.3	8.5	30.8	7.3	26.4
	200	35.9	127.1	21.5	76.3	14.4	50.9	10.8	38.1	7.2	25.4	6.2	21.8
12 5	275	41.4	149.1	24.8	89.5	16.6	59.7	12.4	44.7	8.3	29.8	7.1	25.6
12.5	350	46.1	168.2	27.7	100.9	18.5	67.3	13.8	50.5	9.2	33.6	7.9	28.8
	400	49.0	179.8	29.4	107.9	19.6	72.0	14.7	53.9	9.8	36.0	8.4	30.8
	200	39.6	142.0	23.8	85.2	15.8	56.8	11.9	42.6	7.9	28.4	6.8	24.3
	275	45.7	166.5	27.4	99.9	18.3	66.6	13.7	50.0	9.1	33.3	7.8	28.6
15	350	51.1	197.9	30.6	112.7	20.4	75.2	15.3	56.4	10.2	37.6	8.8	32.2
	400	54.3	200. 8	32.6	120.5	21.7	80.4	16.3	60.2	10.9	40.2	9.3	34.4
	200	44.9	163.2	26.9	97.9	18.0	65.3	13.5	49.0	9.0	32.6	7.7	28.0
	275	51.9	191.4	31.2	114.8	20.8	76.6	15.6	57.4	10.4	38.3	8.9	32.8
20	350	58.1	215.9	24.8	129.6	32.2	86.4	17.4	64.8	11.6	43.2	10.0	37.0
	400	61.8	230. 8	37.1	138.5	24.7	92.4	18.5	69.2	12.4	46.2	10.6	39.6

# APPENDIX CALIBRATION VALUES

# В

## SECTION WIDTHS

Use the following formulas to help calculate the section widths.

Calculate the section width with the formula:

 $T \times S = SW$ 

Where T = the number of Tips in each section, S = the Spacing between tips, and SW = the Section Width.

#### FOR EXAMPLE:

20 tips in a section with spacing of 40 inches [50.8 cm] would yield:

$$20 \times 40 = 800$$

or a Section Width of 800 inches [2032 cm] (approximately 67 feet [20 m]). Enter 800 [2032] as the width for this section.

# TARGET RATE CALIBRATION

The following information must be known in order to determine which spray nozzles to use with the sprayer:

- Nominal Application Pressure\_\_\_\_\_ PSI [kpa]
- Target Application Rate\_\_\_\_\_ GPA [lit/ha]
- Target Speed\_\_\_\_\_ MPH [km/h]
- Nozzle Spacing\_\_\_\_\_ inches [cm]

From this information, calculate the volume per minute per nozzle as follows:

 $\mathsf{NVPM} = \frac{\mathsf{Rate} \times \mathsf{Speed} \times \mathsf{NS}}{5,940[60,000]}$ 

NVPM = Nozzle Volume per Minute (Gal/Min [L/Min]), Rate = Target Application Rate, Speed = Target Speed of Application, and NS = Nozzle Spacing.

#### FOR EXAMPLE:

Application Pressure = 30 PSI, Target Application Rate = 20 GPA, Target Speed = 5.2 MPH, and Nozzle Spacing = 20 inches

$$\mathsf{NVPM} = \frac{20 \times 5.2 \times 20}{5,940} = 0.35$$

Using the calculated nozzle volume per minute of 0.35 at an application pressure of 30, select a boom nozzle which comes closest to providing the desired output.

#### PRODUCT CALIBRATION SETTINGS

#### **RESPONSE SENSITIVITY**

The response sensitivity controls how sensitive the system is to changes in pressure, flow, and speed. Decrease if the system pressure and rate oscillate slightly. Increase sensitivity if control is unresponsive. Avoid setting response rate and sensitivity above 70. The default value is 50.

#### DEADBAND

The deadband value is the allowable difference between the target rate and the actual application rate. The values range from 1 to 9, where 1 equals a 1% difference and 9 equals 9% difference.

## PRESSURE CONTROL SETTINGS

#### **RESPONSE RATE**

The response rate controls how fast the system adjusts pressure and rate output. Decrease response rate if system pressure and rate oscillate greatly. Increase if control is unresponsive. Avoid setting the response rate and sensitivity above 70. The default value is 35.



С

# MAINTENANCE SCHEDULE AND REPLACEMENT PARTS

# INTELLISPRAY™ NOZZLE CONTROL VALVE MAINTENANCE

#### TABLE 1. Maintenance Schedule

Inspection	Frequency	Procedure			
		1. With the system power on, ensure all Intellispray <sup>™</sup> NCV LEDs are flashing. If not, check the cable connections to the NCV's and the fuses in the fuse block located near the boom on the chassis cable harness.			
Walk-Around Inspection of System	Weekly/as	2. Verify the boom cables are securely fastened to the boom and are not hanging below the lower boom tube.			
Components	needed	3. Inspect each NCV for damage and proper installation on the nozzle bodies.			
		4. Verify that the Intellispray <sup>™</sup> CANbus terminators (located on the boom cables on each boom tip) are present and securely tied to the boom cables.			
		1. Ensure the main product tank is cleaned and filled with at least 100 gallons of fresh water or that the pump is drawing fresh water from the vehicle rinse tank.			
	<ul> <li>2. Park the sprayer in a safe local and spray.</li> <li>3. Ensure the Intellispray<sup>™</sup> prod Auto.</li> <li>Daily after use</li> <li>4. Enter a target pressure of 40-rate of 10-20 GPA.</li> </ul>	2. Park the sprayer in a safe location to unfold the booms and spray.			
		3. Ensure the Intellispray <sup>™</sup> product control mode is set to Auto.			
System Rinse		4. Enter a target pressure of 40-60 psi and an application rate of 10-20 GPA.			
		5. Set the test speed to 6 MPH.			
		6. Enable the sprayer product pump.			
		7. Turn on all section switches and the master spray switch.			
		8. Continue to spray water out of the booms until all chemical is flushed from the system or at least 30 seconds.			
		9. Turn off the Master Spray Switch.			
_		1. Perform a system rinse.			
System Rinse (for		2. Set the Intellispray <sup>™</sup> system to Manual mode.			
with Air Blow Out	Daily after use	3. Set the pump PWM to zero and Nozzle PWM to 50-75%.			
systems)		4. Follow the vehicle manufacturer's normal procedure for the Air Blow-Out function.			

Inspection	Frequency	Procedure
		1. Fill the chemical tank with water or another rinse agent, or use the pump tank inlet valve to select a separate rinse tank source (if present).
		2. In Intellispray <sup>™</sup> Manual mode, set a pump and nozzle PWM of approximately 50%. Set the injection pump rate to around 30-50 oz/acre.
		3. With the injection pump set to ON, enter a self test speed.
Injection Pump Rinse	Daily after use/ when switching	4. Verify you are in a good location to spray the chemical from the injection pump and carrier lines.
	chemicals	5. Turn on the product pump, and turn on at least one boom section and the master spray switch. The injection pump should begin to draw rinse fluid into the pump and pump it into the carrier line. Continue spraying for approximately 30 - 60 seconds or until all of the chemical has been flushed from the system.
		6. Turn Off the master switch and product pump. Verify the valve positions are set for the next application.
		1. With the system power on, ensure all Intellispray <sup>™</sup> NCV LEDs are flashing. If not, check the cable connections to the NCV's and the fuses in the fuse block located near the boom on the chassis cable harness.
Walk-Around Inspection of System	Weekly/as	2. Verify the boom cables are securely fastened to the boom and are not hanging below the lower boom tube.
Components	needed	3. Inspect each NCV for damage and proper installation on the nozzle bodies.
		4. Verify that the Intellispray <sup>™</sup> CANbus terminators (located on the boom cables on each boom tip) are present and securely tied to the boom cables.
	After 500 hours or	1. Turn off the Intellispray <sup>™</sup> system and product pump.
NCV Seal	as needed.	2. Bleed any remaining pressure from the boom system.
Replacement	before and after spray season.	3. Perform the Nozzle Control Valve maintenance procedure(page 84).





	Control Value	Soal Doplace	mont Kit Cor	nnononte
I ADLE Z. INUZZIE	CONTROL VALVE	Seal Replace		noonems

NCV Туре	Manufacturer Part Number	Number on Figure 1	NCV Replacement Component	NCV Component Replacement Part Number
		1	Fly Nut, 100 Pack	117-1005-214
		2	Plunger Assembly	117-1005-211 for 100 or 117-1005- 051 for one
		3	O-Ring, Internal	117-1005-211 for 100 or 117-1005- 051 for one
Hypro/Arag	063-0173-810	4	Stainless Valve Body	107-1005-003
		5	Outlet Seal, 56 Pack	219-1005-001M
		6	O-Ring, Face Seal, 56 Pack	219-1005-115M
		2, 3, 5, 6	Plunger and Seal Kit, 100 Pack	117-1005-211
		1, 2, 3, 5, 6	Seals and Plunger Kit, Single NCV	117-1005-051

NCV Туре	Manufacturer Part Number	Number on Figure 1	NCV Replacement Component	NCV Component Replacement Part Number
		1 Fly Nut, 100 Pack		117-1005-213
		2	Plunger Assembly	117-1005-210 for 100 or 117-1005- 050 for one
		3	O-Ring, Internal	117-1005-210 for 100 or 117-1005- 050 for one
TeeJet	063-0173-815	4	Stainless Valve Body	107-1005-001
		5	Outlet Seal, 56 Pack	219-1005-001M
		6	O-Ring, Face Seal, 56 Pack	219-1005-115M
		2, 3, 5, 6	Plunger and Seal Kit, 100 Pack	117-1005-210
		1, 2, 3, 5, 6	Seals and Plunger Kit, Single NCV	117-1005-050
		1	Fly Nut, 100 Pack	117-1005-215
		2	Plunger Assembly	117-1005-212 for 100 or 117-1005- 052 for one
		3	O-Ring, Internal	117-1005-212 for 100 or 117-1005- 052 for one
Wilger	063-0173-809	4	Stainless Valve Body	107-1005-002
		5	Outlet Seal, 56 Pack	219-1005-002M
		6	O-Ring, Face Seal, 56 Pack	219-1005-116M
		2, 3, 5, 6	Plunger and Seal Kit, 100 Pack	117-1005-212
		1, 2, 3, 5, 6	Seals and Plunger Kit, Single NCV	117-1005-052

#### NOZZLE CONTROL VALVE MAINTENANCE PROCEDURE

Intellispray<sup>™</sup> nozzle control valves are designed to provide maintenance free operation with proper equipment maintenance as recommended by the equipment or chemical manufacturer. However, the seals may become worn or swollen due to chemical compounds, chemical formulations, or high operating pressures. This may cause accelerated wear to the sealing surfaces. The following nozzle control valve maintenance procedures should be performed on the nozzle control system or on individual nozzles if leaks are observed at a specific spray tip.





- 1. Loosen the fly nut (item 1) and remove the Intellispray<sup>™</sup> nozzle control valve from the nozzle body.
- 2. Inspect the large o-ring (item 6) on the face of the valve body (item 4). Replace if necessary.
- 3. Inspect the small o-ring (item 5) on the tip of the valve body. Replace if necessary.
- 4. Using a valve body removal tool (P/N 321-0000-457), loosen and remove the valve body (item 4) from the Intellispray<sup>™</sup> nozzle control valve.



FIGURE 3. Nozzle Control Valve Exploded View

- 5. Inspect the o-ring (item 3) on the inside of the valve body. Replace if necessary.
- 6. Clean and inspect the plunger assembly (item 2). Replace the plunger assembly if the rubber seal is worn or damaged. Refer to Figure 4 on page 86 for reference to plunger seal condition.
- 7. Inspect fly nut (item 1). Replace if worn or damaged.

FIGURE 4. Plunger Inspection Detail





**NOTE:** Seal color may vary.

#### INTELLISPRAY<sup>™</sup> NOZZLE CONTROL VALVE ASSEMBLY PROCEDURE

To reassemble a nozzle control valve after inspection and maintenance:

#### FIGURE 5. Nozzle Control Valve Assembly



- 1. Replace fly nut (item 1) over valve body (item 4).
- 2. Replace o-ring (item 3) inside valve body.
- 3. Place plunger assembly (item 2) into nozzle control valve cavity.
- 4. Thread the valve body onto the nozzle control valve and finger tighten.
- 5. Using a valve body removal tool (P/N 321-0000-457), turn valve body 1/4 to 1/3 turn to secure to the valve body.
- 6. Verify small o-ring (item 5) is seated into groove on valve body tip.
- 7. Place large o-ring (item 6) onto valve body face.
- 8. Thread fly nut onto nozzle body on equipment spray boom.
- 9. Hand tighten the fly nut to the nozzle body or use the fly nut wrench if necessary. Do not over tighten.

10. Prior to filling the tank with chemical or starting a field application, refer to the Testing for Leaks section on page 87 to test the Intellispray<sup>™</sup> system.

# SYSTEM TESTING

#### **TESTING FOR LEAKS**

- 1. Fill the applicator tank with clean water.
- 2. Toggle the implement master switch to the on position.
- 3. Select the pump softkey to activate the product pump.
- 4. Toggle one section switch to the on position.
- 5. Inspect the Intellispray<sup>™</sup> nozzle control valves for leaks around the fly nut.
- 6. If leaks are observed:
  - a. Toggle the section and master switches to the off position.
  - b. Use the Intellispray<sup>™</sup> fly nut wrench to carefully tighten the fly nut until leaking ceases.
  - c. If leaking continues after tightening the fly nut more than half a turn, perform the procedures outlined in the Intellispray<sup>™</sup> Nozzle Control Valve Maintenance section on page 81 to inspect the nozzle control valve, o-rings, and plunger assembly.
  - d. Repeat this procedure to verify leak has stopped. Contact a local Intellispray<sup>™</sup> dealer for additional assistance if leaks persist.
- 7. Repeat this process to check nozzle control valves on each section of the equipment.

# FLOW METER MAINTENANCE

- **NOTE:** Remove system pressure and chemical from the hoses and all other system lines prior to disassembling the flow meter, fittings, or hoses.
- 1. Remove flow meter from the equipment and flush with clean water to remove any chemicals.
- 2. Remove flange bolts or clamp from the flow meter.
- 3. Remove the turbine hub and turbine from inside flow meter.
- 4. Clean turbine and turbine hub of metal filings or any other foreign material, such as wettable powders. Confirm that the turbine blades are not worn. While holding the turbine hub in your hand, spin turbine. The turbine should spin freely with very little drag inside the hub.
- 5. If transducer assembly is replaced or if turbine stud is adjusted or replaced, verify the turbine fit before reassembling. Hold turbine hub with turbine on transducer. Spin turbine by blowing on it. Tighten turbine stud until turbine stalls. Loosen turbine stud 1/3 turn. The turbine should spin freely.
- 6. Re-assemble flow meter.
- 7. Using a low pressure (approximately 5 PSI [34.5 kPa]) jet of air, verify the turbine spins freely. If there is drag, loosen hex stud on the bottom of turbine hub 1/16 turn until the turbine spins freely.
- 8. If the turbine spins freely and cables have been checked per Troubleshooting Flow Meter Cables section on page 55, but flow meter still is not metering properly, replace flow meter transducer.

# RECALIBRATING THE FLOW METER

To calibrate the flow meter:



- 1. Fill the applicator tank with clean water.
- 2. Open the UT Menu and select the Intellispray<sup>™</sup> menu button.
- 3. From the home screen, select the Tools Menu softkey along the right side of the display.
- 4. Select the System Settings tab along the top of the display and select the Product Control Settings button.
- 5. Enter a value of 10 [38] for the meter cal.
- 6. Select the Home softkey along the right side of the display and then select the Tally Registers softkey.
- 7. Enter a value of zero for the total volume value.
- 8. Toggle the master switch and all boom sections to the off positions.
- 9. Remove a section hose and place it into a calibrated five gallon [19 liter] container.
- 10. Toggle the master switch and the boom switch corresponding to the hose that was placed in the container.
- 11. Pump exactly ten gallons [38 liters] of water to fill the container twice.
- 12. Check the total volume registered on the UT tally registers prompt. The reading displayed is the new meter cal value. This value should be within  $\pm$  3% of the calibration number stamped on the tag of the flow meter.
- 13. Repeat this procedure several times to confirm accuracy. Always "zero out" the total volume display before retesting.

NOTE: For increased precision, set meter cal to 100 [378] and pump 100 gallons (378 liters) of water.

14. To verify the flow meter calibration, the fill applicator tank with a predetermined amount of measured liquid (i.e. 250 gallons [946.4 L]).

**NOTE:** Do not rely on graduation marks molded into the applicator tank.

15. Empty the applicator tank under normal operating conditions.

If the total volume displayed is different from the predetermined amount of measured liquid by more than  $\pm$  3%, complete the following calculation:

$$\mathsf{CMC} = \frac{\mathsf{MC} \times \mathsf{V}_{\mathsf{M}}}{\mathsf{V}_{\mathsf{A}}}$$

Where CMC = the Corrected Meter Cal, MC = the Meter Cal used to apply the known volume, and VM = the Volume measured by the UT tally registers prompt, and VA = the predetermined volume applied.

#### FOR EXAMPLE:

The UT displays a Total Volume of 260 [984] when a Meter Cal of 720 [190] was used to apply a measured volume of 250 gallons [946 liters]. Therefore:

English	Metric
$CMC = \frac{720 \times 260}{250} = 749$	$CMC = \frac{[190] \times [984]}{[946]} = [198]$

the Corrected Meter Cal is 749 [198]

16. Return to the Product Control Settings prompt and enter a value of 749 [198] for the meter cal.



# POWER AND PRODUCT CONTROLLER II ECU HARNESS MAINTENANCE

- 1. Disconnect the Product Controller II ECU harness connector and inspect for signs of moisture or corrosion.
- 2. If moisture of corrosion is detected, use Deoxit D5, brushes, and compressed air to clean and dry the connector.
- 3. When clean, apply a coating of Corrosion X HD to the connector mating surfaces and contacts.
- 4. Reattach the connectors.

# BOOM HARNESS CONNECTOR MAINTENANCE

Prior to connecting the Intellispray<sup>™</sup> boom cable to the Intellispray<sup>™</sup> Nozzle Control Valves (NCV), perform the following steps to all 6-pin NCV connectors and 19-pin circular connectors between the boom cables and Product Controller II ECU cable connections to ensure high quality connections:

- 1. Verify the NCV connectors and the accompanying boom cable connectors are free of moisture, contamination, or oxidation. Oxidation will appear as a dry, white coating on the contacts. If any connectors show signs of moisture, contamination, or oxidation, perform Step 2 Step 6. If this is a new installation, skip to Step 7. All components listed below can be ordered in the Intellispray<sup>™</sup> NCV Connection Maintenance Kit (P/N 117-0171-692).
- 2. Spray the connection with a deoxidizing agent (DeoxIT D5 is recommended (P/N 222-4001-006)).



3. Clean contacts with a small wire brush (P/N 321-0000-477).



- 4. Spray the contacts again with the deoxidizing agent. This will rinse out debris.
- 5. Remove all residue of deoxidizing agent from the connection. Not removing deoxidizing agent can damage the connector seal.
- 6. Dry out the connection with dry, compressed air. Dust Off Electronics Duster (P/N 222-4001-007) is recommended however, if unavailable, alternate compressed air sources can be used. If using compressed air from a large volume air compressor, be sure the lines are free of moisture.



- 7. If not already applied, apply a single short burst of corrosion inhibitor (Corrosion X HD (Raven P/N 222-0000-020 or available from http://www.corrosionx.com/corrosionx-heavy-duty.html)) into the NCV connection. Be sure the corrosion inhibitor has coated the NCV contacts and recessed portions of the connector.
- NOTE: To determine is corrosion inhibitor has been applied, inspect for a thick liquid in the bottom of the connector (as shown in the Corrosion Inhibitor Applied image below). **NCV Connector**



**Applying Corrosion Inhibitor** 



**Corrosion Inhibitor Applied** 





# INTELLISPRAY™ STORAGE AND START-UP CHECKLIST

This section provides procedures to maintain the Intellispray<sup>™</sup> system. There are checks to perform before storing the equipment and also starting the equipment after long periods without use.

#### PRESEASON CLEANING AND FLUSHING

The Intellispray<sup>™</sup> system requires a few steps in addition to your sprayer manufacturer's recommended preseason maintenance and inspection. To prepare the Intellispray<sup>™</sup> system:

- 1. Remove and clean all of the product strainers.
- 2. Replace the strainers after they are clean and dry.
- 3. Fill the product tank with at least 200 gallons of clean water.
- 4. If the boom tubes have a flush valve at the end, open the flush valves and flush the boom tubes with 100 gallons of clean water.
- 5. Close the flush valves.
- 6. Remove all of the spray tips or turn the nozzle bodies to an open position (no tips) and flush the booms with the remaining water.

#### START-UP INSPECTION

Follow the inspection instructions in the vehicle specific installation manual. Perform these steps with the key on without the engine running.

- 1. Verify that 80 mesh or finer screens are installed upstream of the Intellispray<sup>™</sup> nozzle control valves.
- 2. Flush the boom plumbing and tank before running liquid through the Intellispray<sup>™</sup> nozzle control valves.
- 3. Ensure the Intellispray<sup>™</sup> nozzle control valves are recognized by the Intellispray<sup>™</sup> Product Controller II ECU. If not, repeat the Calibration Wizard. If the Intellispray<sup>™</sup> Product Controller II ECU is not present on the UT screen, check the vehicle specific Intellispray<sup>™</sup> installation manual to verify the Intellispray<sup>™</sup> Product Controller II ECU cable harness and vehicle power cable harnesses are installed correctly.
- 4. Ensure that the boom and flowmeter information have been properly entered into the equipment settings.
- 5. Ensure the pressure sensor(s) are calibrated properly.
  - a. Verify the correct sensor value is entered.
  - b. Relieve trapped pressure in the boom. Ensure the pressure sensor reads 0 PSI and calibrate.
- 6. Ensure the Min and Max PWM have been entered to match the specific value of the vehicle installed. Leaving min at 0 will cause the valve to respond slowly while increasing pressure. If max is left at 100 PWM, the valve may reduce pressure slowly.
- 7. Verify the boom configuration has been imported into the machine settings. Failure to do this will cause the boom sections to not be recognized in a job. Virtual sections should show up in boom settings. If properly completed, the ISO icon at the top right of the screen will be green. Intellispray<sup>™</sup> nozzle control valves must be properly indexed for this to work.

- 8. Inspect the status of the overlap control unlock. Temporary unlock is usually active upon start-up but a permanent unlock purchase is required to ensure proper overlap control operation.
- 9. Ensure the alarm indicator is green. Red indicates a serious error condition that will prevent the system from spraying. Yellow alarm indicates a warning that requires investigation but will not prevent spraying. Clear all conditions as necessary.
- 10. Enter a test speed in the UT mode. The boom section switches on the vehicle should respond with the corresponding boom section icons in the UT window. No triangle indicates that the boom is off. an empty triangle indicates the boom is active but is being controlled by Accuboom. A triangle that is filled in blue indicates the boom is spraying. The nozzle control valves should click of operating properly. Expect a pump pressure error because the pump is not running.
- **NOTE:** With water in the tank this step can be performed with the engine running. Do not run the pump for an extended period of time with no liquid in the tank because this may damage the seals.
- 11. Start a job. Ensure that all necessary widgets are available to the operator to allow proper machine operation. Make a copy for the complete widget setup for the operator to modify.
- 12. In job view mode, enter a test speed. Verify that the section control is off. The boom section switches should respond to the corresponding boom sections in the UT window. No triangle means the boom is off. An empty triangle indicates the boom is active but is being controlled by Accuboom. A triangle filled in blue means the boom should be spraying. Expect a pump pressure error since the pump is not running. if the booms do not respond correctly, delete and import the boom settings.
- **NOTE:** With water in the tank this step can be performed with the engine running. Do not run the pump for an extended period of time with no liquid in the tank because this may damage the seals.
- 13. After all systems are functions properly, will the tank with water and complete the functional inspection.

#### FUNCTIONAL INSPECTION

Refer to the following sections for assistance with validating that the Intellispray<sup>™</sup> nozzle control system has been installed properly:

#### NOZZLE CONTROL VALVE FUNCTION

To verify that the Intellispray<sup>™</sup> nozzle control system is functioning properly after installation:

- 1. Flush the main product tank and boom plumbing with clean water, and verify the tank contains at least 100 gallons [379 L] of clean water.
- 2. Park the equipment in an area with enough space to unfold the booms and allows for visual inspection of the spray pattern from a moderate distance (e.g. 20 ft [6.1 m]).
- 3. Set the Intellispray<sup>™</sup> nozzle control system to manual mode, and set both the pump PWM and nozzle PWM to 50%. Refer to the ± Bump section on page 39 for assistance with adjusting the PWM percent values in the manual control mode.
- 4. Toggle all section switches and the master switch.



- 5. While maintaining a safe distance away from any spray drift, visually check that all nozzle control valves are pulsing with a uniform pattern. Adjacent nozzle control valves should alternate pulsing. If adjacent spray tips are pulsing at the same time, refer to Chapter 8, Troubleshooting, for additional assistance.
- 6. On the UT, set nozzle PWM to 0% to close the nozzle control valves.
- 7. Visually check that none of the nozzles are spraying or dripping. Refer to Testing for Leaks section on page 87 for additional assistance and troubleshooting if leaks are observed.

#### TURN COMPENSATION FEATURE INSPECTION

To verify the Turn Compensation feature is enabled and operating as anticipated:

**NOTE:** Complete the procedure outlined in the Nozzle Control Valve Function section on page 96 to validate the nozzle control valve function prior to performing the following procedure.

If the Intellispray<sup>™</sup> system came installed on the equipment from the equipment manufacturer, or if a sparge pressure transducer is installed with the Intellispray<sup>™</sup> control system, check the transducer specifications and refer to the "Advanced Transducer Calibration" on page 33 for additional information.

- 1. Move the implement to an open area where the equipment may be turned.
- 2. Verify that the turn compensation feature is enabled.
- 3. Set the system to automatic mode and toggle the section and master switches to the on positions. Refer to Chapter 5, Operation, for additional assistance with operation of the nozzle control system.
- 4. While driving at a speed between 5 and 10 mph [8 and 16 km/h] and maintaining a safe working distance, observe the inner-most and outer-most spray tips while the implement is turning sharply.
- **NOTE:** The nozzle PWM percent value may also be used to monitor the operation of nozzle control valves across the spray boom. Refer to Chapter 7, Nozzle Control Valve Diagnostics, for additional assistance with on-screen nozzle control valve diagnostics.
- 5. While turning, the nozzle control valves toward the outside of the corner should begin to output a higher flow rate (higher PWM percent), while valves toward the inside of the corner should begin to output a reduced flow rate (lower PWM percent) or may shut off. The difference between inner and outer flow rates will vary depending on machine speed, turn rate, and implement width.
- 6. If the operator is able to observe a difference in the spray pulsing, a difference in high, average, and low values on the NCV performance indicator, or the on-screen PWM percent located in the nozzle diagnostics screens, the turn compensation feature is working correctly. If there is no difference between the PWM percent values across the implement width, recalibrate the turn compensation feature and repeat this test.

#### OVERLAP CONTROL ADJUSTMENT

Refer to the sprayer specific manual for information on adjusting overlap control.

#### WINTERIZING AND STORING THE SYSTEM

Refer to the sprayer manufacturer winterizing and storing procedure for information on preparing equipment for storage. Do not rely on blow-out systems to remove all the water and/or chemicals from the system. If water, or other fluids, are trapped in the Intellispray<sup>™</sup> system components could freeze and cause severe damage. Intellispray<sup>™</sup> nozzle control system components are compatible with most types of automotive, RV, and marine antifreeze solutions.


# INTELLISPRAY<sup>™</sup> FLOWCHART

This section provides a flowchart of the Intellispray<sup>™</sup> screens and may be useful for navigating though the UT. The flowcharts start on the next page.







#### FIGURE 2. Intellispray<sup>™</sup> Screen Flow (Tools Menu Softkey Continued)



FIGURE 3. Intellispray<sup>™</sup> Screen Flow (Tools Menu Softkey Continued)



#### FIGURE 4. Intellispray<sup>™</sup> Screen Flow (Tally Registers and Diagnostics Menu Softkeys)

FIGURE 5. Intellispray<sup>™</sup> Injection Screen Flow (Diagnostics Information and Calibration)







This section provides information on the Remote Diagnostics Application (available on the Raven App store). Intellispray<sup>™</sup> allows the user to control the system and perform diagnostics through a personal mobile device such as a tablet or smart phone. The user can turn on and off boom sections, turn the pump on or off, and view real-time system information for troubleshooting or demonstration purposes without having to leave the cab. A Bluetooth low energy (BLE) compatible device is required.

The Remote Diagnostics Application is available for download and use on any Android or iOS Bluetooth low energy compatible device.

To use the diagnostics application:

- System speed must be zero.
- The application must be connected to PC II.
- The Enable Wireless Control check box must be checked in the PC II User Settings.
- Master Switch and Boom Section switches must be on.

**NOTE:** The Enable Wireless Control check box will automatically uncheck if a speed is detected.

#### DIAGNOSTIC APPLICATION BEST PRACTICES

- Verify the system speed is zero on the PCII home screen and there are no alarm for the PCII or NCV bus.
- Verify Bluetooth functionality is turned on for the mobile device.
- Go to PCII System Information Page and check the Enable Wireless Control checkbox.
- Turn on all boom switches and master switch using the machine switches.

**IMPORTANT**: Do not attempt to connect to devices yet.

#### OUTSIDE OF THE MACHINE CAB

- Exit the cab and walk to the back of the boom until you can see PCII.
- Enter the mobile diagnostics app and wait for the device with the matching Wireless ID to be detected. Select that device.
- When prompted, enter the Hardware Serial Number as the passcode. This should only require entry the first time the mobile deice is paired to PCII.
- Turn the product pump On and Off using the pump icon on the app.
- Turn On and Off the spray sections and NCV's as needed using the ON and OFF buttons, Left/Right Indexing Arrows or the sections to be displayed on the application.
  - Sections and NCV's will turn on as the boom is mapped for conventional or bypass spray control.
  - To take control of the spray sections, the OFF and ON buttons may need to be toggled.
- Turn off sections and pump on the application when back in the cab.
- Disconnect the application or move the vehicle. This will uncheck the Enable Wireless Control checkbox in the User Settings screen.

• Any time the Enable Wireless Control box is unchecked, or the boom and master switches are in the wrong position, Control Disabled will display on the app.

#### APPLICATION SCREENS

The section provides an overview of the application screens.

#### DIAGNOSTICS



- Mobile Software Application software version
- Product Controller II ECU Software Connected Product Controller II ECU software version
- UT Status UT Connection Status
- Product Controller II ECU Voltage Connected Product Controller II ECU voltage
- Pump PWM Pump PWM percentage
- Signal Strength Wireless signal strength at the time of connection
- Packet Rate Wireless data speed

Diagnostics	This list will show all of the supported Product Controller II ECU Wireless IDs the mobile device has detected.
BLE SPP 37:E4:27	Select the desired Product Controller II ECU Wireless ID (the wireless ID can be found on the
BLE SPP 37:E4:97	System Information screen on the PC II CT) and enter the passcode. The passcode will display on the UT screen. If the Product Controller II
BLE SPP 37:F4:F4	ECU Wireless ID has already been connected, no passcode is required and the application will
Demo Device	automatically switch to the next page.
	NOTE: Only one Product Controller II ECU can be connected at a time. The Product Controller II ECU wireless ID will not show up if it is connected to another mobile device.
	NOTE: Selecting Demo Device will open the application in demo mode and not connect to a Product Controller II ECU. This mode is for exploring the mobile application.
÷	

#### APPENDIX G





lcon	Function
	Turn section on or off. There is an icon for turning the section to the right or left of.
	Turn all sections on.
	Turn all sections off.

lcon	Function
$\mathbf{\times}$	Turn product pump off.
01	Section Status. Green border indicates on. Gray border indicates off.

# A

Application Mode 41 Application Speed Guide 74 Area Applied 41 Automatic Nozzle Indexing 13

## B

Boom Harness Connector Maintenance 91

# С

Calibration NCV's 21 Calibration Values Section Widths 69, 79, 99 Calibration Wizard 11 Care and Use 10 Controller Diagnostics Information 33 Current Vehicle Speed and Application Speed Range Display 42

# D

Direct Injection 9 DTC Alarm Status Indicator 44

# E

Edit Mode vii Equipment Settings Tab 20

### F

Fence Row Display 23 Flow Meter Maintenance 87 Flow Meter Maintenance and Adjustment Procedure 81, 95, 107

## G

**General Troubleshooting** 64

### Η

Home Screen 37

Application Speed 42 Area Covered 44 Section Status Display 44 Volume Applied 44

### 

Important Safety Information 1 Electrical Safety 2 Injection Pump Efficiency 43 Injection Wizard 15, 21 Injection Wizard and Calibration 15 Introduction

Unit Definitions and Conversions vii Unit of Measure Conversions vii Unit of Measure Definitions vii

#### Μ

Max Tank Fill PWM 27 Meter and Cal Units 13

#### Ν

Nozzle Control Mode 20 Nozzle Control Valve Function 13 Nozzle Control Valve Maintenance 81, 84 Nozzle Control Valve Status 53 Nozzle Spacing Display 23 Nozzle Technical Specifications 54

## 0

Operation Checklist 37 Operation Modes 8

#### Ρ

Power and ECU Harness Maintenance 91 Pressure Control Settings 80 Pressure Gauge 42 Pressure Nozzle Control 8 Product Calibration Settings 80 Product Control Home Screen 37

## R

Rate Gauge 41 Recalibrating the Flow Meter 88

### S

Section Control Mode 21 Section Status Display 44 Section Widths 79 Storage and Start-Up Checklist 95 System Information 35 System Settings - Alarm 27 System Settings - Presets 28 System Settings - Pressure 31 System Settings - Product Control 29 System Settings - Tank Fill 26 System Settings - User Settings 23 System Testing 87

### Т

Tally RegistersArea per Hour Display 48Distance 48Field Area and Volume 48Total Area and Volume 48Volume per Minute Display 48Target Calibration Rate 79Target Pressure 42Target Rate 41Testing Flow Meter Cables 55Testing for Leaks 87Testing NCV Cable Connections 54

Tip Selection and Application Speed Guide 73 Tip Size Option 21 Toggle Nozzle Count Display 22 Tools Menu Overview 19 Turn Compensation 8, 14

### U

Updates 10 Using Tally Registers 47

#### V

Virtual Sections 9 Volume Applied 44

#### W

Wheel Tracks 9

# LIMITED WARRANTY

# WHAT DOES THIS WARRANTY COVER?

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Division product under normal use, maintenance, and service when used for intended purpose.

# HOW LONG IS THE COVERAGE PERIOD?

Raven Applied Technology products are covered by this warranty for 12 months from the date of retail sale. In no case will the Limited Warranty period exceed 24 months from the date the product was issued by Raven Industries Applied Technology Division. This warranty coverage applies only to the original owner and is non-transferable.

# HOW CAN I GET SERVICE?

Bring the defective part and proof of purchase to your Raven dealer. If the dealer approves the warranty claim, the dealer will process the claim and send it to Raven Industries for final approval. The freight cost to Raven Industries will be the customer's responsibility. The Return Materials Authorization (RMA) number must appear on the box and all documentation (including proof of purchase) must be included inside the box to be sent to Raven Industries.

# WHAT WILL RAVEN INDUSTRIES DO?

Upon confirmation of the warranty claim, Raven Industries will (at our discretion) repair or replace the defective product and pay for the standard return freight, regardless of the inbound shipping method. Expedited freight is available at the customer's expense.

# WHAT IS NOT COVERED BY THIS WARRANTY?

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit, labor, or other damages. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.





# EXTENDED WARRANTY

# WHAT DOES THIS WARRANTY COVER?

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Division product under normal use, maintenance, and service when used for intended purpose.

# DO I NEED TO REGISTER MY PRODUCT TO QUALIFY FOR THE EXTENDED WARRANTY?

Yes. Products/systems must be registered within 30 days of retail sale to receive coverage under the Extended Warranty. If the component does not have a serial tag, the kit it came in must be registered instead.

# WHERE CAN I REGISTER MY PRODUCT FOR THE EXTENDED WARRANTY?

To register, go online to www.ravenhelp.com and select Product Registration.

# HOW LONG IS THE EXTENDED WARRANTY COVERAGE PERIOD?

Raven Applied Technology products that have been registered online are covered for an additional 12 months beyond the Limited Warranty for a total coverage period of 24 months from the date of retail sale. In no case will the Extended Warranty period exceed 36 months from the date the product was issued by Raven Industries Applied Technology division. This Extended Warranty coverage applies only to the original owner and is non-transferable.

# HOW CAN I GET SERVICE?

Bring the defective part and proof of purchase to your Raven dealer. If the dealer approves the warranty claim, the dealer will process the claim and send it to Raven Industries for final approval. The freight cost to Raven Industries will be the customer's responsibility. The Return Materials Authorization (RMA) number must appear on the box and all documentation (including proof of purchase) must be included inside the box to be sent to Raven Industries. In addition, the words "Extended Warranty" must appear on the box and all documentation if the failure is between 12 and 24 months from the retail sale.

# WHAT WILL RAVEN INDUSTRIES DO?

Upon confirmation of the product's registration for the Extended Warranty and the claim itself, Raven Industries will (at our discretion) repair or replace the defective product and pay for the standard return freight, regardless of the inbound shipping method. Expedited freight is available at the customer's expense.

## WHAT IS NOT COVERED BY THE EXTENDED WARRANTY?

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit, labor, or other damages. Cables, hoses, software enhancements, and remanufactured items are not covered by this Extended Warranty. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

# Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.

